

(11) Publication number:

**0 367 368
A1**

(12)

EUROPEAN PATENT APPLICATION

(21) Application number: 89303909.9

(51) Int. Cl.⁵: B65H 23/038 , B65H 23/26

(22) Date of filing: 20.04.89

(30) Priority: 31.10.88 US 265423

(43) Date of publication of application:
09.05.90 Bulletin 90/19

(84) Designated Contracting States:
BE DE FR GB IT SE


(71) Applicant: WEB PRINTING CONTROLS CO.,
INC.
23872 North Kelsey Road
Barrington Illinois 60010(US)

(72) Inventor: Gnuechtel, Herman C.
235 S. Kennicott
Arlington Heights Illinois 60005(US)
Inventor: Kosmen, Stephen P.
3860 Lexington Drive
Hoffman Estates Illinois 60195(US)

(74) Representative: Newstead, Michael John et al
Page & Co. Temple Gate House Temple Gate
Bristol BS1 6PL(GB)

(54) Web guide apparatus.

(57) A microprocessor-controlled web guidance system (20) which automatically implements and maintains a proper lateral web alignment of a continuous web in a web printing press. A steering mechanism (50) is provided which is controlled by a microprocessor system which utilizes infrared radiation for edge detection wherein multiple sensors (82, 84) are driven by means of stepper (88, 90) motors driving on a flexible linear cogged belt system (92). The system includes novel functions, and diagnostic and maintenance modes which may be programmed by the operator. A plurality of control panels (26, 28) are provided to enable the operator to select and program desired functions and to access desired modes. Self calibration and testing of the steering mechanism (50) and the edge sensors (82, 84) is also provided.

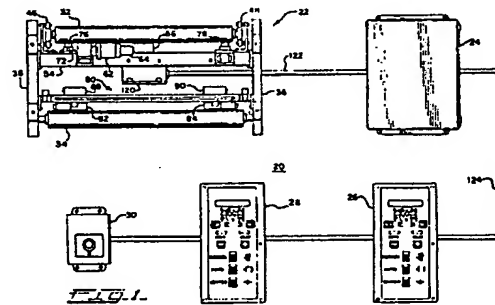

EP 0 367 368 A1

WEB GUIDE APPARATUS

Background of the Invention

A portion of the disclosure of this patent document contains material which is subject to copyright protection. The copyright owner has no objection to the facsimile reproduction by anyone of the patent document or the patent disclosure, as it appears in the Patent and Trademark Office patent file or records, but otherwise reserves all copyright rights whatsoever.

This invention relates generally to web handling apparatus and more particularly to a microprocessor controlled web guidance system to automatically implement and maintain proper lateral web alignment of a continuous web in a web handling system such as a printing press. In numerous industrial commercial processes, operations are performed in a continuous travelling web of a thin material, such as paper or plastic film, etc., which move through machines at high speed. Such web process operations include, for example, printing of newspapers or magazines, coating the moving web, slitting the moving web lengthwise, cutting the moving web transversely, etc. These operations usually require accurate lateral alignment of the web to maintain the web in proper registry with the machine that operates on the web. However, the moving web often shifts laterally from a proper lateral position on the rollers supporting it resulting in lateral misalignment relative to the machine. This displacement of the web from its proper lateral position interferes with the operations being performed on the web and often results in wastage and/or a crash of the web handling system. Thus, it is usually necessary to correct any misalignment as promptly as possible. Consequently, web guide devices which sense the lateral position of the web and automatically adjust the lateral position of the web when it deviates from a desired position are commonly used in the art.

It is known in the art to use web guide apparatus which includes a stationary support frame with a moveable steering frame mounted on the support frame. This moveable frame is steered by an appropriate positioning device such as a hydraulic cylinder or an electric motor, and normally includes a pair of spaced, parallel steering rollers over which the web is run. A sensor detects the lateral position of the web as it leaves the steering rollers and generates a signal to control the steering frame positioning motor. The moveable steering frame is pivoted relative to the support frame by the positioning motor about a pivot point along the center line axis of the incoming web. This pivoting action

moves the rollers such that the web is repositioned laterally as it moves along and over the guide rollers.

In some prior art web guide apparatus, the sensing of the alignment of the moving head is accomplished by using a single web edge detector, such as a photodetector or infrared detector, positioned at one lateral edge of the moving web to detect transverse displacement of the web edge. In other situations, the width of the moving web may vary so that two edge detectors have been used to monitor both edges of the web. In addition, moveable edge detectors have been used in the prior art. Systems have also been proposed which provide a digital readout display of the correction being made to the position of the web.

Prior art web guide systems have numerous deficiencies. Such systems do not provide diagnostic and maintenance modes of operation to aide in the operation of the apparatus. Inability to calibrate the tilt mechanism makes it difficult to set trip points to stop or adjust the web handling line. These limitations often lead to undesirable and expensive crashes of the web handling line. In addition, control and drive mechanisms for the movement of the edge sensors has been inadequate leading to failure to keep track of sensor position and inaccurate position of the sensor due to gear backlash. The present invention overcomes these and other deficiencies of the prior art web guide apparatus and provides new and additional features not heretofore available.

Accordingly, it is an object of the present invention to provide a novel microprocessor controlled web guidance system having novel maintenance and diagnostic features.

It is another object of the invention to provide a novel microprocessor controlled web guidance system having a novel tilt mechanism calibration system for calibrating the full scale gain of the tilt mechanism.

It is yet another object of the invention to provide a novel microprocessor controlled web guidance system having a novel edge sensor drive mechanism utilizing a cogged linear belt in conjunction with stepper motors and counting means to keep track of the edge sensor position.

It is still another object of the invention to provide a novel microprocessor controlled web guidance system having a plurality of control panels with serial communications between the control panels and the control circuitry.

Briefly, according to one embodiment of the invention, a web guidance system is provided for automatically controlling alignment of a moving

web. The system comprises a stationary support frame and a pivotable frame attached to the support frame and pivotable over a predetermined range, including parallel steering rollers for receiving the moving web. Sensing means is provided including at least one edge sensor positionable along either longitudinal edge of the web for sensing a transverse deviation in the position in the longitudinal edge of the web and for generating an error signal in response thereto. Control means is provided for generating a control signal responsive to the error signal for automatically correcting the deviation of the web position, and drive means is provided for controlling the angular position of said pivotable frame by pivoting the pivotable frame responsive to the control signals. In addition, manual means are provided to enable an operator to assume manual control of the drive means, and maintenance means provides maintenance modes of operation and can enable an operator to select functions and diagnostic, self-calibrating or maintenance modes of operation.

Brief Description of the Drawings

The features of the present invention which are believed to be novel are set forth below with particularity in the appended claims. The invention, together with further objects and advantages thereof, may be understood by reference to the following description taken in conjunction with the accompanying drawings.

FIG. 1 is a diagrammatic illustration of a specific embodiment of a web guide system in accordance with the invention.

FIG. 2 is a perspective view of portions of a specific embodiment of the web guide assembly shown in FIG. 1 with parts removed to illustrate a web threaded therethrough.

FIG. 3A is a top view illustrating a specific embodiment of the steering roller assembly of the web guide assembly shown in FIG. 1.

FIG. 3B is a top view of a portion of the steering assembly shown in FIG. 3A.

FIG. 3C is side view of a portion of the steering assembly shown in FIG. 3A.

FIG. 4A is a top view illustrating a specific embodiment of the scanner mechanism according to the invention.

FIG. 4B is a diagrammatic cross-sectional top view of the scanner edge sensor shown in FIG. 4A.

FIG. 5 is a front view illustration of a specific embodiment of the control panel shown in FIG. 1.

FIG. 6 is a flow diagram illustrating the processing flow and logical methodology of the pro-

gram for the control circuitry of the web guide system shown in FIG. 1.

FIG. 7 is detailed block diagram illustrating a specific embodiment of the circuitry for the control circuitry shown in FIG. 1.

FIG. 8 is a detailed block diagram illustrating a specific embodiment of the circuitry for the control panel shown in FIG. 5.

FIG. 9 is a schematic diagram of the correction motor control circuit shown in FIG. 7.

Detailed Description of the Preferred Embodiment

Referring to FIG. 1 there is shown a diagrammatic illustration of a web guide system 20 in accordance with the present invention for use with a web printing press. The system 20 includes a web guide assembly 22, control circuitry 24, a control panel 26, an optional remote control panel 28, and an optional auxiliary control panel 30. The web guide assembly 22 is shown with a front view having a top roller 32, which forms the exit roller of the steering or tilt mechanism, shown in more detail in FIG. 3A, and having a lower roller 34, functioning as an exit roller. The rollers 32 and 34 are mounted on a stationary frame composed of a gear edge plate 36 and an operator edge plate 38. Near the exit roller 34 a scanner mechanism 80 having two edge sensors 82, 84 is mounted to the gear edge plate 36 and operator edge plate 38, as shown. The terms "gear" and "operator" are commonly used in the art, and are used herein to designate a particular side of the press, the "operator" side being where the operator normally works, and the "gear" side being where the press drive gear mechanism is normally located.

FIG. 2 is a perspective view of the web guide assembly 22 with portions removed to illustrate a specific example of the travel of the web 40 through the assembly 22. The web 40 is threaded from an idler entrance roller 42 over an lead-in steering roller 44 and the exit steering roller 32 and under the exit idler roller 44, as shown. The steering rollers 32 and 44 form a steering mechanism 50, and are rotatably mounted on the steering roller support members 46, 48.

The steering mechanism 50 is illustrated in greater detail in Figures 3A, 3B, and 3C. Figure 3A is a top view of the steering assembly 50, with the drive mechanism removed, having the side members 46, 48 mounted on a steering pivot beam 52. The pivot beam 52 is mounted on a support cross-member 54 (See Figure 1 and Figure 3B) by means of a pivot mechanism 56. The support cross-member 54 is mounted on the stationary

frame side plates 36, 38 as shown in Figure 1. The pivot mechanism allows the steering assembly 50 composed of the lead-in and exit steering rollers 44, 32, the side members 46, 48, and the pivot beam 52 to be angularly pivoted (tilted) about the axis of the pivot mechanism 56 in the directions shown by the arrows 58, 60 relative to the support cross-member 54. An offset center pivot is utilized with the pivot 56 offset toward the lead-in side of the steering mechanism 50 to provide the greatest web movement as a function of pivot position with respect to minimum web distortion. The offset also pushes the web in the direction of the correction thereby yielding a faster correction rate. A tilt potentiometer 78 is also coupled to the steering mechanism 50 by a coupling mechanism 79 and mounted on the support cross member 54. The tilt potentiometer 78 provides a position signal which permits the control circuitry 24 to monitor the relative position of the steering pivot beam 52.

The pivot beam 52 is driven angularly in either direction by a drive means including a DC motor 62, as shown in the top view of a portion of the steering mechanism 50 illustrated in Figure 3B. The motor 62 includes a tachometer 64, and is coupled to a gear box 56 mounted on the support cross-member 54. A lead screw gear assembly 68 extending from the gear box 66 and driven by the motor 62 drives the pivot beam 52 to the desired angular position by interaction with a ball bearing nut assembly 70 mounted on the pivot beam 52, as shown. The tachometer 64 permits the system control circuitry 24 to monitor the speed at which the beam is pivoted and uses this signal as a feedback signal to aid in controlling the correction motor 62. Limit switches 72, 74 mounted on the support cross-member 54 interact with a paddle 76 to provide a limit signal to the control circuitry 24 when the pivot beam 52 reaches maximum permitted angular displacement. The structure of the steering assembly 50 may be more fully appreciated by inspection of the side view of a portion of the steering mechanism illustrated in Figure 3C.

Referring now to Figure 4A there is illustrated a top view of a specific embodiment of the scanner mechanism 80 shown in Figure 1. The scanner mechanism 80 is mounted on the operator edge support plate 38 and gear edge support plate 36 of the stationary support frame, as shown. The scanner mechanism includes two movable edge sensors, an operator edge sensor 82 and a gear edge sensor 84 movably mounted on a scanner bar 86. The edge sensors 82, 84 are also coupled to drive means comprising an operator sensor synchronous stepper motor 88 and a gear sensor synchronous stepper motor 90 which are movably mounted to engage a linear cogged belt 92. This structure enables backlash free movement of the sensors 82,

84 by the independent stepper motors 88, 90 while ensuring accurate location of the sensors. The stepper motors 88, 90 are controlled by signals coupled from the control logic 24. An operator side tensioner 94 is provided, as shown, to ensure proper tension of the belt 92. An operator end of travel block 98 and gear end of travel block 100 interact with end of travel sensors 102 and 104, respectively, to provide end of travel signals to the control circuitry 24.

The operation of the edge sensors 82, 84 is illustrated in the diagrammatic cross sectional top view of an edge sensor in FIG. 4B. Each sensor is constructed having two separated arm portions 110 and 112, as shown. In one arm 110 is located a source of radiation 114 emitting infrared light in the illustrated embodiment. The infrared light emitted by the source 114 is modulated by a 2KHz modulating signal in the illustrated embodiment to mask out ambient light. In addition, a transparent cover 116 is mounted, as shown, and the infrared light radiates through the cover 116 into a channel having a width which encompasses the typical range of web edge deviation from a desired or predetermined position. In the other arm 112 of the sensor is another transparent cover 118 which passes the portion of the infrared light that passes the edge of the web 140 extending between the arms 112, 114. A detector 120, such as an infrared photocell, receives the infrared radiation and produces an input signal corresponding to the magnitude of the infrared radiation impinging upon the detector 120. As shown, the sensor is positioned such that the web blocks part of the light path. Thus, the amount of infrared radiation block is directly proportional to the web position and the signal generated by the detector 120 is directly related to the web position.

Two sensors are supplied with the system to permit several types of operation. When guiding in the center mode using two sensors the system essentially compares the output of both sensors and adjusts the steering mechanism to position the web such that the signal from both sensors is equal. When edge guiding the system compares the output of the selected sensor with a preset constant. This preset constant is set such that the steering mechanism positions the web in the middle of the sensor. In the center mode using both sensors, the centerline of the web is what the system accurately holds in position. In the edge mode, the edge selected is the side the system holds accurately.

The web guide assembly 22, including the steering mechanism motor 62 and the sensor motors 88, 90 is controlled by control signals coupled via a junction block 120 and a cable 122 to the web guide assembly 22 from the control circuitry 24, as shown in FIG. 1, to provide control of the course of

the web 40, either automatically or manually. The control circuitry 24 is described in greater detail hereinafter with reference to FIGS. 7 and 9. Operator control of the circuitry is provided by a control panel 26, and optional additional control panels including a number of additional remote panels 28 and auxiliary control 30, as shown. The control panels 26 and 28, are identical and permit operator control of the web guidance system 20 while the auxiliary control permits manual adjustment of the steering mechanism 50. The control panels 26, 28, 30 are connected in parallel and utilize a serial, full duplex communications protocol to communicate via a cable 124 with the control circuitry 24. The control panel circuitry is described in detail hereinafter with reference to FIG. 8.

Referring now to FIG. 5, there is shown a detailed front view of the control panel 26 which operates in conjunction with the control panel circuitry shown in FIG. 8, the control circuitry shown in FIG. 7, and the edge sensors, end of travel sensor, limit switches, motors, and other devices that control the web guide assembly to perform the functional operation selected by the control panel 26. The control panel 26 includes an eight character alphanumeric readout display 130 capable of displaying or scrolling alphabetic or numeric characters. The control panel also includes guide mode indicators 132, 134, motor direction indicators 133, 135 and various panel keys. The panel keys include a program mode (PGM) key 136, a select (SEL) key 138, and operator correction (-) key 140, a gear correction (+) key 142, a manual mode key 144, an auto mode key 146, and a center mode key 148, as shown. Each of the Manual, Auto and Center keys has an associated indicator lamp (e.g., an LED in the illustrated embodiment), as shown, to indicate when the key is activated.

Although, typically the web guidance system 20 is operated to control the course of the web either automatically or manually, five primary functional modes of operation are available to the operator through the control panel. FIG. 6 is flow diagram illustrating the functional flow and methodology of a program for the microprocessor of the system control circuitry 24 in accordance with the invention, and illustrates the five primary functional modes. The five primary functional modes of the system operation are MANUAL, AUTO, CENTER, PROGRAM and MAINTENANCE modes. A program listing for the process illustrated in FIG. 6 for the control circuitry processor (Z-80) of the illustrated embodiment is provided in Appendix A attached hereto.

Referring to FIG. 6, the system upon power up initializes to default values stored in memory if the PZ switch is held on, and otherwise retains values set during previous operation, as illustrated at block

160. Also, as illustrated at block 160, upon power-up the system automatically enters the manual mode by branching to block 162, as shown. While in any mode, the system continually checks for panel key depressions to enable the system to respond to the control panel key selections made by the operator. In the manual mode, the steering mechanism 50 pivot beam 52 may be moved using the operator correction key 140 and the gear correction key 142, as illustrated at block 164. Thus, the web can be shifted in the operator direction by use of the operator key 140 and in the gear direction by depressing the gear key 142. The readout during this mode will monitor and display the current steering beam tilt in a gear or operator percentage or will display "00 CNTR" for the condition in which the steering beam is perfectly centered, as illustrated by block 166. The message "LIMIT" will flash in the readout display 130 whenever an operator or gear tilt limit occurs and the corresponding correction indicator will also flash. This condition will remain until the steering beam is moved off of the limit. The manual mode may be selected while in any of the other modes, and the edge sensors will retract during the manual mode if they are not already fully retracted. As illustrated at block 168, the system checks for key closures to detect operator selection of another mode or tilt instruction.

The program mode (PGM) may be entered while in the manual mode or in the auto mode by branching program control to block 170. The program mode is used to select display and guide mode options and also to specify and program the web width and lap offset values that the operator desires to be used. Upon entering the program mode at block 170, a "display mode" display will be scrolled across the readout 130 and either "TILT %" or "WEB POS" will appear displayed on the readout to indicate which display option was previously selected. The display mode desired is selected by depression of the selection (SEL) key 138. All depressions of the selection key will alternate the display between the two display mode options, thus displaying the available modes as indicated at block 172. This permits the operator to chose between what information will be displayed in the auto mode operation. The manual mode displays tilt percent only. Tilt percent represents the rotational position of the steering mechanism in percent of maximum rotation while the web position option displays the position of the web within the scanners. The display mode is the only mode that can be entered and changed while running in the auto mode. If the display mode is entered from the auto mode, the auto mode can then be reentered by depressing the auto key.

If the program mode was entered from the

manual mode, then a second depression of the PGM key 136 will implement the guide mode option. Once this mode is entered, as indicated at block 174, the display "GUIDE MODE" will scroll across the readout 130, and either "OP EDGE", "GR EDGE", or "CENTER" will be displayed to indicate which guide mode operation was previously selected. Depression of the SEL key 138 will rotate through these three guide mode options to permit selection of the desired option by the operator. These options tell the system which scanner will be used when running in the auto mode. The "OP EDGE" mode indicates that only the operator sensor 82 is the active sensor, the mode "GR EDGE" is the mode in which only the gear sensor 84 is active, and the mode "CENTER" is the mode in which both scanners are active. The sensor LED indicators 132 and 134 are lighted to indicate which guide mode option the system is using. In the various modes, the sensor that is turned off will remain retracted and will also not be checked for scanner fault conditions.

By depressing the PGM key 136 a third time, processing proceeds to access the web width selection mode as indicated at block 176. In this mode, the display "WEB WIDTH" will scroll across the readout 130 and a value in inches will be displayed indicating the web width previously selected. The operator key 140 and gear key 142 may then be used to decrease or increase, respectively, the displayed value in 1/8 inch increments. The gear key 142 will increase and the operator key 140 will decrease the web width value while a constant depression will speed up the value selection process. The exact width in inches of the web being used must be entered for proper operation of certain auto mode functions such as the "find and put" process of presetting scanner positions on initial starting conditions. However, if the auto mode function of "seek and hold" is used, then the web width does not need to be specified.

Upon a fourth depression of the PGM key 136, program flow proceeds to block 178 to the web offset value selection function where the message "WEB CENTERLINE TO PRESS CENTERLINE OFFSET" will scroll across the readout 130 and the value in a fraction of an inch increments (e.g., 1/8", 1/16", etc.) in either a gear or operator direction or a zero center indication will be displayed. This value represents the position of the desired web offset with respect to the centerline of the press. The web offset value must be correctly entered in order for the find and put operation to function, but is not necessary if the seek and hold mode of operation is used. The gear (+) key 142 will increase the offset value to the gear direction and the operator (-) key 140 will decrease the offset to the operator direction. Subsequent depression of

the PGM key 136 will return control to the block 170 to permit rotating through the options and values again. At this point, the auto mode or the manual mode may be selected by depressing the auto key 146 or manual key 144. Throughout this mode, the processor continuously monitors the control panel for key depressions.

Upon completion of the sequence of selections in the program mode, program control may be branched to the auto mode illustrated at block 180 by depressing the auto mode key 146. The auto mode may be implemented using any one of two methods. A seek and hold method may be used when the press is already running above interlock speed when the auto key 146 is depressed. In this mode, the active edge sensor or sensors travel to the edge of the web while the message "SCANNERS SEEKING" is scrolled across the readout 130, as illustrated at block 182. When the edge sensors are locked on to the web, a message "LOCKED" will be displayed and flashed on the readout, as indicated at block 184. The system will then turn on the automatic correction and begin to compensate for any lateral error in the web, as indicated at block 186. The gear 135 and operator 133 indicator lamps (LEDs) will blink in response to the steering beam movements and the readout will display either tilt percent or web position depending upon which display was selected in the display mode during the program mode. These functions are performed to determine the web position by reading the edge sensors and determining the steering beam 52 movements by reading in the value from the tilt potentiometer 78, as indicated at block 188. As indicated at block 190, the processor continually monitors key closures on the control panel in order to respond to operator selections.

A second method of implementing the auto mode is the find and put method of auto mode operation which can occur when the auto mode is selected at a time when the press is below the interlock speed or not running. In this mode, the activated edge sensor or sensors will travel to within two inches of the edge of the web and stop while the readout 130 scrolls the message "WEB WIDTH" followed by a number and "OFFSET" followed by a number, and then scrolls "scanners presetting", as indicated at block 182. The readout 130 then flashes "ready" and the system waits for an indication that the press speed is above interlock from the interlock feedback signal at which time the scanner or scanners will move in to find the edge of the web. Once the web edge is found, a "locked" message will flash on the readout 130 as indicated at block 184 and the system then puts the web in the preset position designated by web width and offset values and maintains the automatic correction as indicated at block 186. Once

the web is in the proper position on the web guide, the readout 130 displays the tilt percent or web position as selected in the display mode. The correction lights 133 and 135 are lit to provide an indication of steering beam movements. The web position and tilt percent values are obtained by reading in the sensor outputs and tilt potentiometer value as indicated at block 188.

Once one of the two methods of entering the auto mode is implemented the system can be left in the auto mode until the operator desires to stop the run or until parameters are changed. Upon emergency stops, such as web breaks and other times during which the press speed drops below the interlock speed, the web guide system 20 will scroll "below interlock" on the readout 130 and the sensors 82 and 84 will partially retract to two inches from the edge of the expected web position. Once this has occurred a message "ready" will then flash on the readout to indicate that the auto mode is still implemented and that compensation of the lateral motion can be resumed as soon as the press is brought back to operation. When in this condition due to an interlock dropout, the system 20, in one mode, will maintain in memory the position of the web and steering beam a predetermined time (e.g., 20 seconds) prior to the interlock dropout. When the press accelerates back up through the interlock speed, the sensors will begin to seek the edge of the web and the message "scanner seeking" will be scrolled across the readout 130. The previous web positions will be reestablished by the web guide after the sensor or sensors have relocated the web edge and have locked on and then the readout 130 will flash "locked". The system then continues to run in the auto mode, correcting for any lateral error and displaying either the tilt percent or web position values as selected. An alternative mode may be selected in which the steering mechanism is returned to a center position after the interlock dropout so that when the system is restarted it begins with the web guide aligned to a centered position.

Upon each entry of the auto mode, a self test of the edge sensors 86, 84 is performed to verify that the edge sensors are working correctly. The test is performed by automatically turning the infrared source 114 on and obtaining a full scale reading, then turning the source 114 off and testing for zero output of the detector 120. This test prevents a situation in which the sensor has its output jammed and the system then looks for a decrease which can't occur. In addition, a check for full scale calibration is made and if full scale output is below a threshold, a message "scanner fault clean scanners" is scrolled across the readout 130, and the system goes into manual mode. The operator would then have to clean the scanner before the

auto mode could be activated. If there are three such failures to enter auto mode in sequence, a message "scanner fault, call maintenance" is generated. Finally, if full scale voltage from the scanner is not correct, but is more than the threshold, then an auto-calibration is performed. The gain of the detector amplifier is modified to bring the output signal to full scale. In this way, compensation for a small amount of dirt on the edge sensor can be provided.

The center mode may be entered by depressing the center key 148 which branches process control to block 192. The center mode provides the capability for the main steering beam to be at its center rotational position. Upon selection of the center mode, the message "centering" is scrolled across the display 130 and the tilt potentiometer is read in to determine the position of the steering mechanism, as illustrated at block 194. The steering pivot beam 52 is then moved to the center position by activating the motor 62 as indicated at block 196. During the centering mode the system processor continually monitors for key-closures. The center mode may be interrupted at any time upon selection of the manual mode by depression of the manual key 144. When the centering function has been completed a message "centered" will flash on the readout 130 and the system, if configured to do so, will automatically return to manual mode. The auto mode, however, cannot be selected until the center mode has finished its centering function.

Upon system power up the system processor checks the PZ switch. If the PZ switch is depressed upon power up the system reinitializes all programmable parameters. If the PZ switch is not depressed on power up, these parameters will remain at the settings that existed on the previous operation.

A maintenance mode is provided so that an operator or maintenance personnel can change parameters and pre-set variable data within the system. This mode is entered at block 200 by activating a internal switch located behind any one of the control panels 26, 28. The maintenance mode may be entered while in either the manual mode or in the auto mode. If entered while the auto mode is in progress, all auto mode functions will proceed normally although normal displays will be inhibited at the remote units involved. Once implemented, a message "maintenance mode" will scroll across the readout 130 and front panel keys become alternate function keys. In addition, all other remote stations connected to the same control circuitry 24 will display "REM - OFF" on the readout 130. This indicates to the operator that the front panel keys in the readout are disabled at that remote panel due to the maintenance mode being selected at one of

the other control panels.

Once the system 20 is in the maintenance mode as indicated at block 200 of FIG. 6 and the other remotes are blocked out, three areas of maintenance operation may be selected using the PGM key 136. Once within a selected area of operation, variables to be programmed within each area are accessed using the SEL key 138. The three maintenance mode areas of operation are defined at the user variable area illustrated at block 202, the user switch area illustrated at block 204 and the address/data area illustrated at block 206. The user variable area is entered upon selection of the maintenance mode, the user switches area is selected by depressing the PGM key after entering the maintenance mode, and the address/data area is selected by depressing the PGM key a second time.

The variables within the user variable area which are selectable are accessed by successive depressions of the SEL key 138. The variables that can be controlled are the speed of the correction motor in the auto mode; the gain and offset of the operator edge sensor; the gain and offset of the gear edge sensor; the paster feedback caution trip point in the operator direction; the paster feedback caution trip point in the gear position; the pulse time on and wait time of the paster feedback signal; and the width between the edge sensors in both inches and any fractional component. The values corresponding to these variables are increased using the gear key 142 and decreased using the oper key 140.

The first variable which may be selected is the correction motor speed in the auto mode and the speed number is displayed on the display and is increased and decreased, if a change is desired, by using the oper and gear keys 140, 142. By depressing the select key 138 the operator may access the operator sensor gain which is the gain of the amplifiers which amplify the output signal of the edge sensor of the operator side. In this status the display will display the gain value and the value can be changed by using the oper and gear keys 140, 142. This permits the operator or maintenance personnel to increase the gain if the gain or output of the edge sensor is low. By depressing the select key 138 again the operator may access the operator edge sensor offset variable which permits the edge sensor offset gain to be changed. This value is a multiplier which is used to equalize the sensor signal input to the control circuitry to permit the signal levels to be maintained at a desired level. The next variables which may be selected is the gear scanner gain and the gear scanner offset which are comparable values to the operators scanner gain and offset discussed above.

The next variables which may be selected in

order are the operator caution trip point for the paster feedback and the gear caution trip point for the paster feedback, which is entered in tilt percent. The paster feedback signal is a conventional feedback signal in web printing press systems which allows the system to adjust the press roll stand by generating a signal (paster feedback signal) which moves the roll stand slightly in the event that it is biased to one side. Thus, if the steering pivot beam is tilted beyond the caution trip point in one direction or the other a paster feedback signal is generated which moves the roll stand slightly to correct for the excessive bias in one direction. The next variable which may be selected is the pulse on time for the paster feedback signal which determines how much movement of the roll stand is accomplished when a paster feedback signal is generated. The next variable which may be selected is the wait time for the paster feedback signal which is the amount of time which the system will disable the paster feedback pulse before another pulse can be generated. This is the time needed to permit a determination of the result of the previous paster feedback signal. The final variable which may be selected in the user variable area is the width between edge sensors which allows the operator to set the width of the web so that the sensors can be properly positioned at the web edges. This number may be entered first in whole inches and then in any additional fractional inch part to one sixteenth of an inch.

To switch to the second area of operation of the maintenance mode illustrated by block 204 of FIG. 6, the user switch area, a depression of the PGM key 136 is utilized. The various switch selections within this area are also accessed by successive depressions of the SEL key 138 and the user selects a state of either on or off for each switch condition. These conditions include center mode to manual mode inhibit; interlock ignore in auto mode, edge sensor retract inhibit on interlock out, edge sensor permanent position enable, edge sensor retract upon powerup inhibit, edge sensor web tracking with servo system off enable, auto center potentiometer automatic gain calibration enable, and disabling of the centering of the main steering beam on interlock out. To set the switches to their desired state the operator depresses the gear key 142 for the ON state and depresses the oper key 140 for the OFF condition.

The first switch selection available upon entering the user switch area is the center mode to manual mode inhibit. When this switch setting is ON the center mode will not exit to the manual mode automatically, while if it is set in OFF center mode will automatically exit to the manual mode when completed. The next switch option is selected by depressing the SEL key 138 (as are all

subsequent switch selections) and is the interlock ignore with the auto mode on. If this switch is set in the ON condition the interlock dropout will be ignored in the auto mode, and if OFF the interlock dropout in the auto mode will result in stopping correction and withdrawal of the edge sensors as described hereinbefore. The next switch selection is the edge sensor retract inhibit in which the ON condition results in the edge sensors retracting on an interlock dropout, while the OFF condition results in no retraction of the edge sensors upon interlock dropout. The next switch selection allows the edge sensors to stay in position and ignore the interlock dropout if in the ON position, and if set to OFF, the edge sensors will locate two inches from the web after interlock dropout and wait for the interlock to return. The next switch selection, if in the ON position, results in the edge sensors going to two inches from the web upon interlock dropout and waiting for interlock return, and then upon interlock return the scanners go to the predetermined web position automatically without searching for the web. If the switch is set to OFF, the scanners will go to the two inch position upon interlock dropout, and then after the interlock returns will search for the web and move the edge sensors to the detected position of the web.

The next switch selection if in the ON position causes the edge sensors to not retract when going through the sequence from the auto mode to the manual mode to power off then back to power on and back to auto mode. If this switch is set in the OFF position then normal operation will occur in which the scanners retract when power is turned off. Thus, in the ON position the switch allows the system to be turned off and then on again from the auto mode back into the auto mode without the scanners retracting. This switch setting resets to OFF after one cycle of operation. The next switch setting when set to ON causes the edge sensors to track to web edge only when in the auto mode but disables the servo system, and when set to OFF operates the auto mode in normal operation.

The next switch selection when set to ON provides a center mode automatic gain calibration of the steering mechanism. This automatic calibration mode causes the system to cycle the steering pivot beam 52 to each extreme of angular development (tilt) and measures the output of the steering beam tilt potentiometer 78 thereby permitting self calibration of the tilt potentiometer 78 after which the steering beam returns to center. In the OFF setting the center mode will simply follow normal operation as described hereinbefore. This calibration mode allows an automatic calibration of the tilt potentiometer so that the system can insure that a reading of 99% tilt occurs just before the limit switch is activated. This feature permits accurate

setting of caution trip points to be used to activate a paster feedback signal when the steering pivot beam angular displacement exceeds the caution trip points. The last switch setting if in the ON position disables centering of the steering pivot beam 52 upon interlock dropout when in the auto mode and maintains the steering pivot beam 52 at the position it was at when the interlock dropout occurred. If the switch is put into the OFF state then normal operation will occur wherein the main beam will center upon an interlock dropout. Another option which may be provided is that instead of the steering pivot beam 52 centering upon interlock dropout the steering pivot beam 52 will return to the position it was at a predetermined time (e.g., 20 sec.) prior to the interlock dropout instead of returning to center.

The third area which may be accessed by an additional depression of the PGM key 136 is the address/data area indicated at block 206. This area of operation permits the user to enter a four digit address location ranging from 4828 to 4851 in hexadecimal and includes the ability to specify a two digit hexadecimal data number for each of these locations. Thus, it permits the operator to address memory locations in the system RAM and then enter new data into that location. In this mode, the manual key 144 and auto key 146 function as cursor movements for which digit positions on the readout 130 are manipulated. Thus, the manual key 144 moves the cursor to the right and the auto key 146 moves the cursor to the left. The desired digit position to be changed will blink. To implement the data and address location displayed in the readout, depression of the SEL key 138 is required. Successive depressions of the PGM key 136 will rotate back through the three areas indicated at blocks 102, 104 and 106.

The operator may exit the maintenance mode at any time by turning off the maintenance mode switch. The system 20 will return to the mode that it was in prior to entering the maintenance mode and other remotes will change the readout from "REM*OFF" to the normal display for the mode being re-entered. The mode in progress will proceed until input from the operator changes the mode.

Referring to FIG. 7, there is shown a detailed block diagram illustrating a specific embodiment of the control circuitry 24 utilizing a microprocessor 210 (e.g., a Z-80 in the illustrated embodiment) to provide control processing. The programming for the microprocessor 210 is stored in a program memory 212 comprising a programmable read only memory (PROM) coupled to the processor 210 via a bus 214, as shown. The microprocessor 210 is coupled to support peripheral circuitry via a main bus 216.

Coupled to the microprocessor 210 via the bus 216 is an input port interface 218 having an interlock signal input, a gear limit switch input 298, an operator limit switch input 296, an operator end of travel input and gear end of travel input, as shown. A stepper motor controller and driver 220 is coupled to the microprocessor 210 via the bus 216 having drive outputs for the operator edge sensor motor and for the gear edge sensor motor. An output port interface 222 provides an output interface with outputs to the operator paster feedback relay and the gear paster feedback relay, as well as the manual move signals 292, 294 for both the operator and gear side and an interlock signal 290. A timer/counter circuit 224 is coupled to the bus 216 and includes a clock 226 coupled thereto. A signal from the clock 226 is coupled to the infrared LEDs 228 to provide the two kilohertz modulation signal to the edge sensor infrared generating LEDs. A random access memory 230 (RAM) which serves as a data memory for storage of operational data for the microprocessor 210 is coupled to the bus 216, as shown. An analog to digital (A/D) converter 232 is coupled to the bus 216 directly as well as through a chip select decoder 234 which provides select signals to the A/D converter under the control of the microprocessor 210. An analog multiplexer 236 provides a multiplexed input to the A/D converter permitting the tilt potentiometer, tachometer, operator scan sensor, and gear scan sensor inputs to be multiplexed into the A/D converter.

Also coupled to the microprocessor 210 via the bus 216 is a dual channel UART communications port 240 which provides full duplex serial communications with the remote control panels 26 via a transmit and a receive line, as shown. In addition, the communications port provides for the input of the PZ switch input as well as an auxiliary data communications port 242, as shown. In addition, a series of multiplier circuits 244, 246, 248 are coupled to the microprocessor 210 via the bus 216. The multiplier 244 permits a microprocessor controlled multiplication of the gear edge sensor signal, and the multiplier 246 permits a similar multiplication of the operator edge sensor signal. The output signals from these two multipliers 244, 246 is differenced in a differential amplifier 247 and coupled to the third multiplier 248, the output of which is coupled directly to a motor control circuit 250 via conductor 304, as shown. This multiplier structure permits the microprocessor 210 to control the gain of the sensor amplification channels. Also coupled to the motor control circuit 250 are the operator limit switch signal 306, gear limit switch signals 308, the interlock signal 290, the correction motor tachometer signal 302, the manual move signals 292, 294 for both the gear and operator side, and gear and operator limit signals 298, 296, as shown. The

output of the motor control circuit 250 is the correction motor servo signal, which is used to drive the steering pivot beam 52. The motor control circuit 250 is shown in detail in the schematic diagram of FIG. 9.

In operation, the motor control circuit 250 utilizes the input signal from the multiplier 248 to control the servo motor. The signal from the multiplier 248 is a modified signal from the edge sensors which has had the signal from the edge sensors adjusted in gained by the multipliers 246 and 244, after which the difference between the two is obtained via the differential amplifier 247, and then the resulting offset error voltage is amplified by the multiplier 248 and coupled to the motor control 250. This error voltage is used by the circuitry 252 in closed loop with the tachometer value from the correction motor. The gain of the amplifier is controlled by the value of the motor speed variable which is set within the maintenance mode. The motor control circuit is thus always attempting to drive the correction motor from the error voltage detected. The tachometer value in the motor is fed back to the motor control circuit in closed loop from the correction motor. The speed of the tachometer thus makes the motor control change its output voltage by speeding up or slowing down until a balance between the error voltage and the feedback voltage is obtained. This results in a speed of correction which effects the movement of the steering mechanism in the direction opposite the error, resulting in a change in the error voltage which approaches zero caused by moving the web back to the zero position in the edge sensor.

As can be seen from inspection of the control circuit 24, the tilt potentiometer input signal is required for correct operation of the system. This potentiometer monitors the relative position of the steering pivot beam for functions such as center mode and tilt percent display modes. The signal from this potentiometer is processed so that the error voltage is the rotational deviation from the zero point of the potentiometer. In the center modes this signal becomes closed loop with the motor tachometer feedback circuitry.

FIG. 8 is a detailed block diagram illustrating a specific embodiment of the control panel circuitry 260, including a control microcomputer (e.g., an 8031) coupled to a main bus 262, as shown. Coupled to the microcomputer 264 via the main bus 262 is the eight character display 266 and the front panel LED indicators 268. The front panel LED indicators are coupled to the bus 262 through a LED driver 269, as shown. The eight character display 266 is coupled to the microcomputer 264 via the bus 262 through a buffer circuit 270 and an LED display driver circuit 272, as shown. Also coupled to the LED display driver 272 is a chip

select decode circuit 274, which is coupled directly to the microcomputer 264, as shown. In addition, the seven panel control keys are coupled directly to inputs of the microcomputer 262, as well as a direct input from the maintenance switch 276, as shown. A program listing for a program to operate the processor (8031) of the illustrated embodiment is provided in Appendix B.

The control panel circuitry 260 communicates directly with the control circuitry 24 through the communications port 240 of FIG. 7 via receiving line 278 and transmit line 280. A communications between the control circuitry 24 and the control panel circuitry 260 is serial communication using a serial protocol wherein multiple control panels may be coupled in parallel to the control circuitry 24.

The serial protocol uses a twelve byte block to transmit data with each byte composed of an eleven bit byte. Each message block is composed of a beginning byte, ten message bytes and an end byte. The remote first detects the beginning byte which alerts it to the arrival of a message after which the next eight bytes contain message information followed by a ninth byte which holds the LED display values and a tenth byte, the maintenance byte, which informs the remote if the system is in the maintenance mode. Each closure of a key is transmitted from the control panel to the control circuitry five times and the control circuitry counts the transmissions to verify a true key closure. Each byte is composed of a start bit followed by eight data bits, a parity bit and a stop bit. This serial protocol provides for reliable transmission, together with the capability for multiple remote control panels.

Specific embodiments of novel methods and apparatus for automatic web guidance has been described for the purposes of illustrating the manner in which the invention may be used and made. It should be understood that the implementation of other variations and modifications of the invention in its various aspects will be apparent to those skilled in art, and that the invention is not limited by the specific embodiments described. It is therefore contemplated to cover by the present invention any and all modifications, variations, or equivalents that fall within true spirit and scope of the basic underlying principles disclosed and claimed herein.

Claims

1. A web guidance system for automatically controlling alignment of a moving web, comprising: a stationary support frame; a pivotable frame attached to the stationary support frame for receiving the moving web, and being

pivotable over a predetermined range and including parallel steering rollers rotatable about an axis extending transversely of the web direction of travel; sensing means including at least one edge sensor for sensing a transverse deviation in the position of a longitudinal edge of the web and for generating an error signal in response thereto; control means for generating control signals responsive to the error signals for automatically correcting the deviation of the web position by pivoting the pivotable frame; drive means for pivoting the pivotable frame to control the angular position of said pivotable frame responsive to the control signals; manual means for enabling an operator to assume manual control of the drive means; and maintenance means for providing selectable and programmable maintenance modes of operation.

2. The web guidance system of Claim 1 wherein the maintenance means comprises testing means for testing the edge sensors by activating the sensors and comparing full scale sensor error signal output to a threshold and generating a maintenance message if the full scale sensor level is below the threshold.

3. The web guidance system of Claim 2 wherein the test means tests the sensor automatically before the sensors are positioned along the longitudinal edge of the web.

4. The web guidance system of Claim 2 wherein the testing means further comprising means for calibrating the edge sensors by activating the sensors and adjusting the gain of an amplifier coupled thereto to obtain a desired sensor error signal level in response to the full scale sensor error signal exceeding the threshold.

5. The web guidance system of Claim 1 wherein the drive means further comprises measuring means for generating position signals responsive to the angular displacement of the pivotable frame and means for calibrating the measuring means by automatically driving the pivotable frame to angular extremes of the predetermined range, determining a full scale position signal value for each extreme, and utilizing the full scale position signal value to calibrate the measuring means by percentage of maximum angular displacement.

6. The web guidance system of Claim 5 wherein the maintenance means further comprises means for setting a caution trip point as a percent of total maximum pivotable frame angular displacement and further comprising means for generating a master feedback signal having a pulse width to permit correction of undesired pivotable frame angular displacement responsive to the pivotable frame angular displacement exceeding the caution trip point.

7. The web guidance system of Claim 6

wherein the maintenance means comprises means for enabling an operator to enter a pulse time for the paster feedback signal and a wait time during which additional generation of paster feedback signals are disabled.

8. The web guidance system of Claim 1 further comprising memory means having a plurality of memory locations for storage of operational data and wherein the maintenance means comprises means for enabling an operator to select desired functions and maintenance modes including a mode which enables an operator to address any memory location of the memory means and store selected data at the addressed memory location.

9. The web guidance system of Claim 1 further comprising moving means for automatically moving the edge sensors away from the web in response to an interlock dropout signal.

10. The web guidance system of Claim 9 wherein the moving means further comprising means for automatically centering the pivotable frame in response to the interlock dropout signal.

11. The web guidance system of Claim 9 further comprising means for automatically storing for a predetermined period of time the angular position of the pivotable frame and for automatically returning the pivotable frame to an angular position it had the predetermined time prior to detection of the interlock dropout signal.

12. The web guidance system of Claim 1 wherein the control means further comprises a plurality of control panels for enabling operator selection of desired functions and wherein the maintenance means further comprises means for disabling all but one of the control panels when a maintenance mode of operation is selected by the operator.

13. The web guidance system of Claim 1 wherein the sensing means comprises two edge sensors and the maintenance means comprises means for enabling operator numerical programming of a spacing distance between the sensors and operator programming of sensor activation.

14. The web guidance system of Claim 1 wherein the drive means comprises a motor having a selectable speed and the maintenance means comprises means for enabling the operator to numerically program the motor speed.

15. The web guidance system of Claim 1 further comprising means for disabling the generation of control signals for automatically correcting the deviation of the web responsive to an interlock dropout signal and for generating control signal to center the pivotable frame in response to the interlock dropout signal.

16. A web guidance system for automatically controlling alignment of a moving web comprising:
a stationary support frame;

a pivotable frame attached to the stationary support frame and pivotable over a predetermined range for receiving the moving web, and including parallel steering rollers rotatable about an axis extending transversely of the web direction of travel;

sensing means including at least one edge sensor for sensing a transverse deviation in the position of the longitudinal edge of the web and for generating an error signal in response thereto;

control means for generating control signals for automatically correcting the deviation of the web position having a plurality of control panels for enabling operator selection of desired functions with serial full duplex digital communications between the plurality of control panels and the control means;

drive means for controlling the angular position of said pivotable frame responsive to the control signals; and

manual means for enabling an operator to assume manual control of the drive means.

17. A web guidance system for automatically controlling the alignment of a moving web comprising:

a stationary support frame;

a pivotable frame attached to the stationary support frame and pivotable over a predetermined range for receiving the moving web, and including parallel steering rollers rotatable about parallel axis extending transversely of the web direction of travel;

sensing means for sensing the lateral position of the web including two moveable edge-detecting sensors with drive means for driving each sensor comprising a flexible linear cogged belt permitting the sensor to be moved along a rack by at least one drive stepper motor including counting means for counting stepper motor steps for each motor thereby tracking the edge detecting sensor position;

control means for generating control signals responsive to the error signals for automatically correcting the deviation of the web position by pivoting the pivotable frame;

drive means for pivoting the pivotable frame to control the angular position of said pivotable frame responsive to the control signals; and

manual means for enabling an operator to assume manual control of the drive means.

Neu eingereicht / Newly
Nouvellement déposé

EP 0 367 368 A1

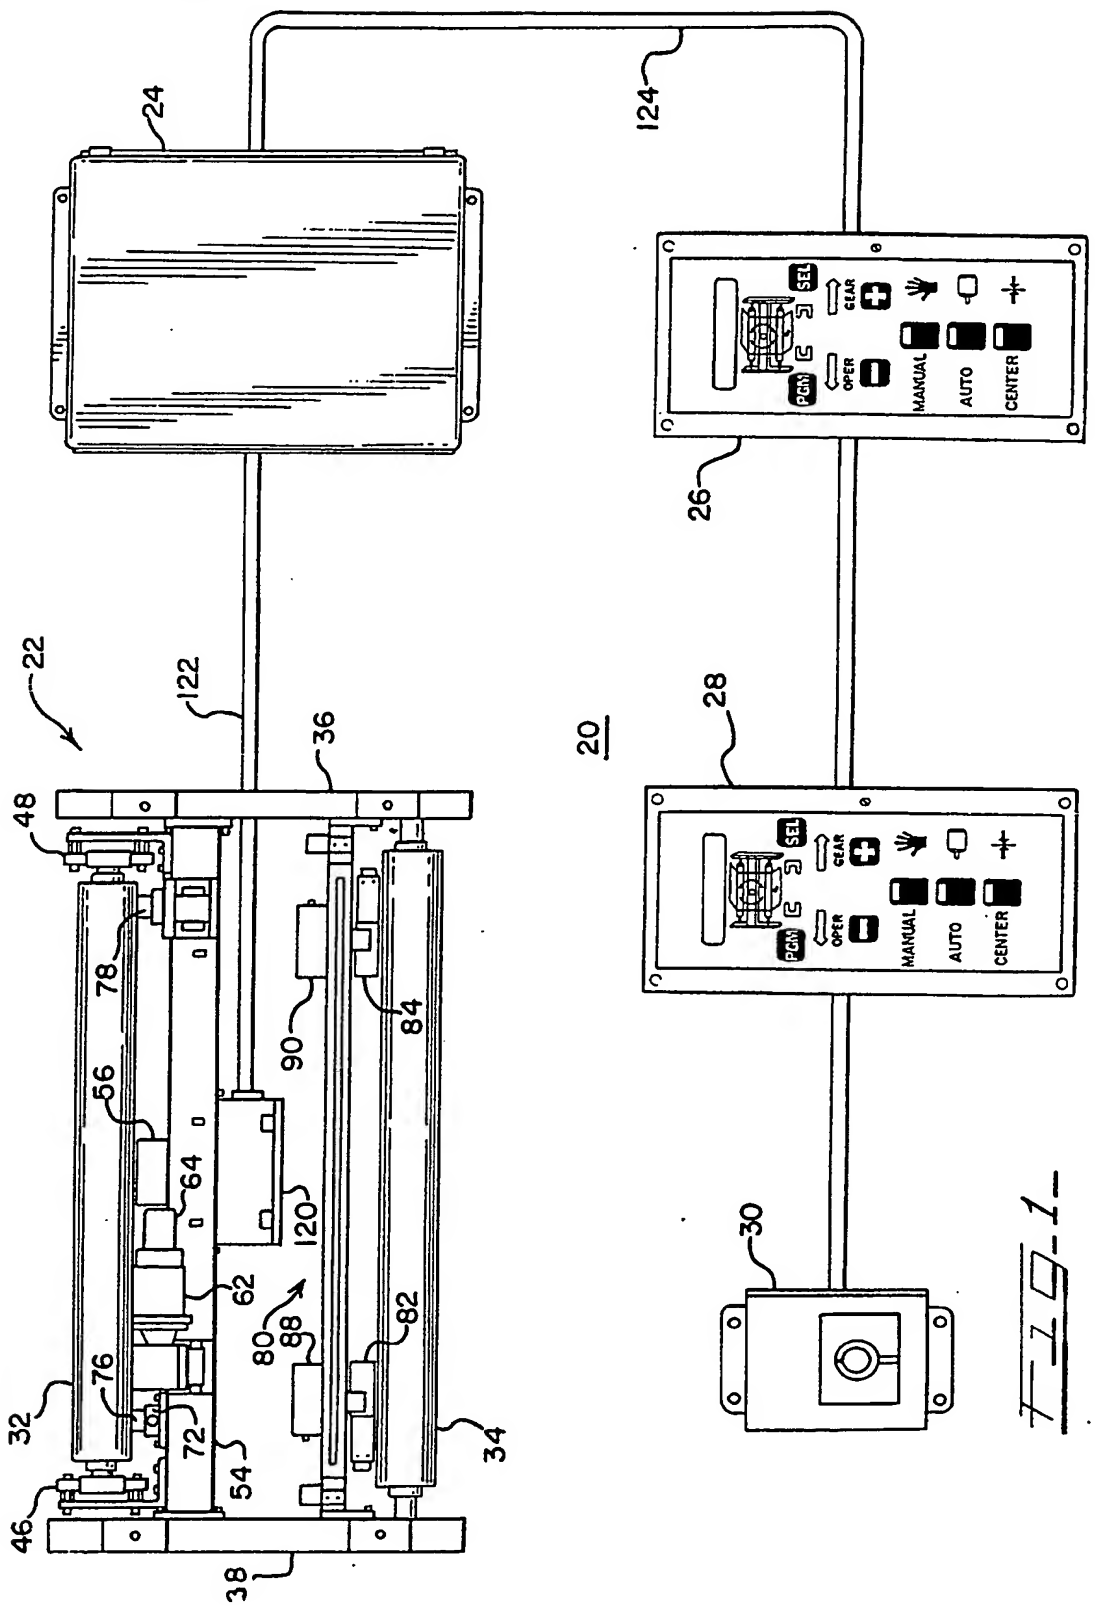


FIG. 1

Nou eingereicht / Newly
Nouvellement dépos

FIG-2

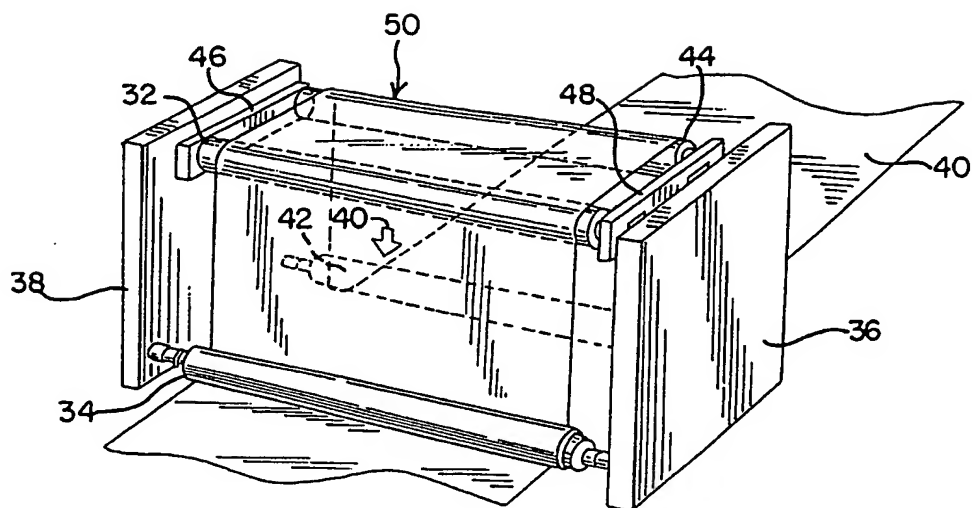
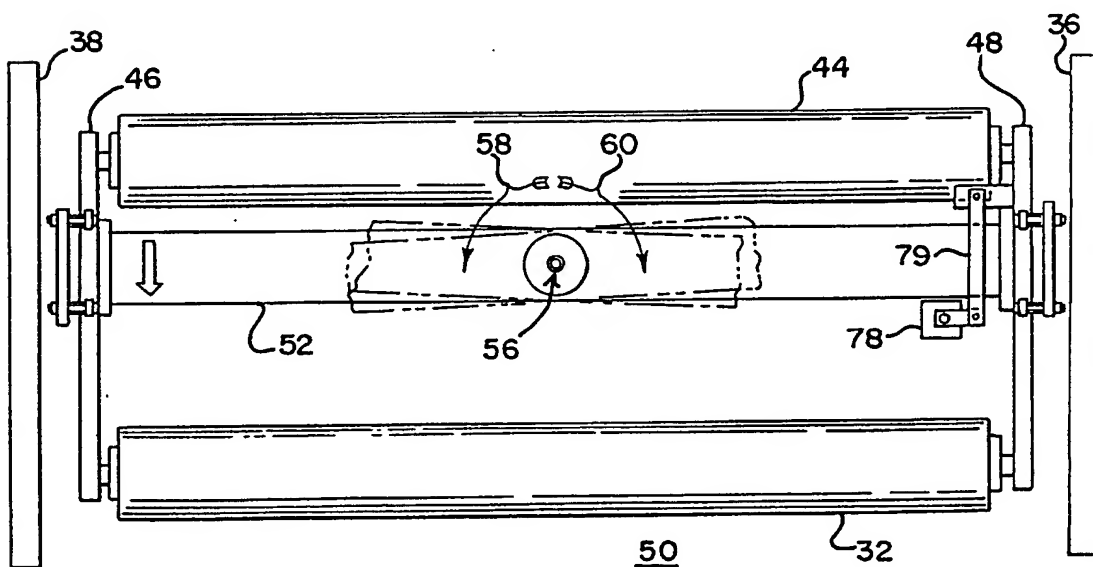
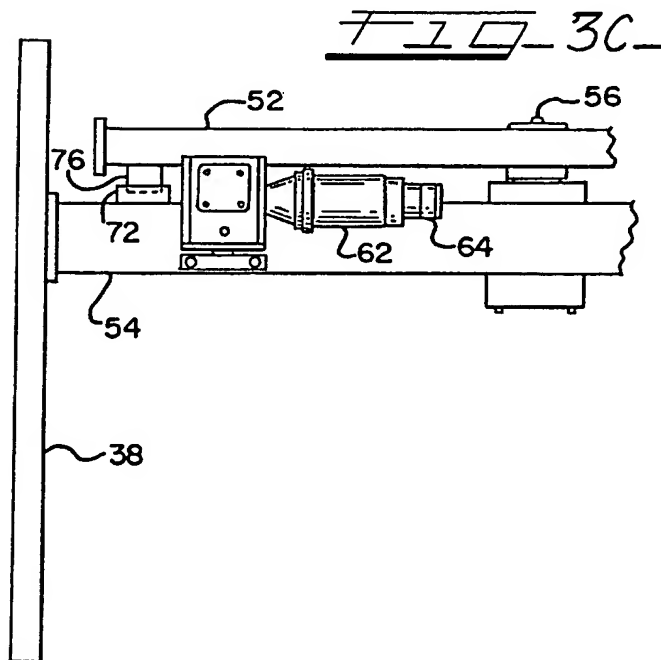
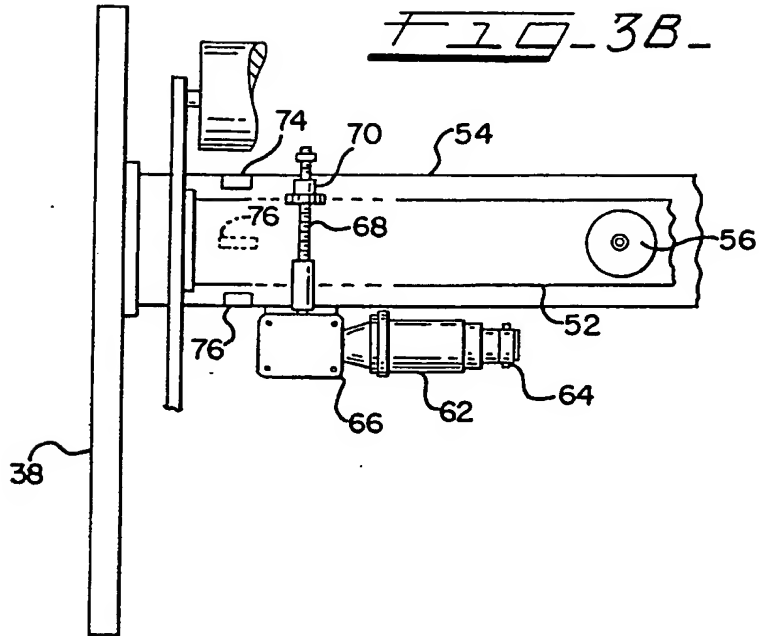


FIG-3A





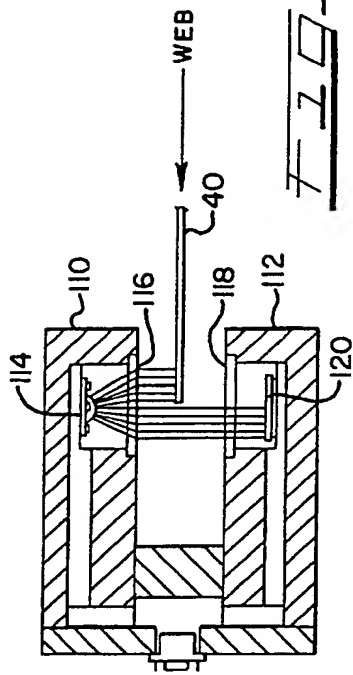
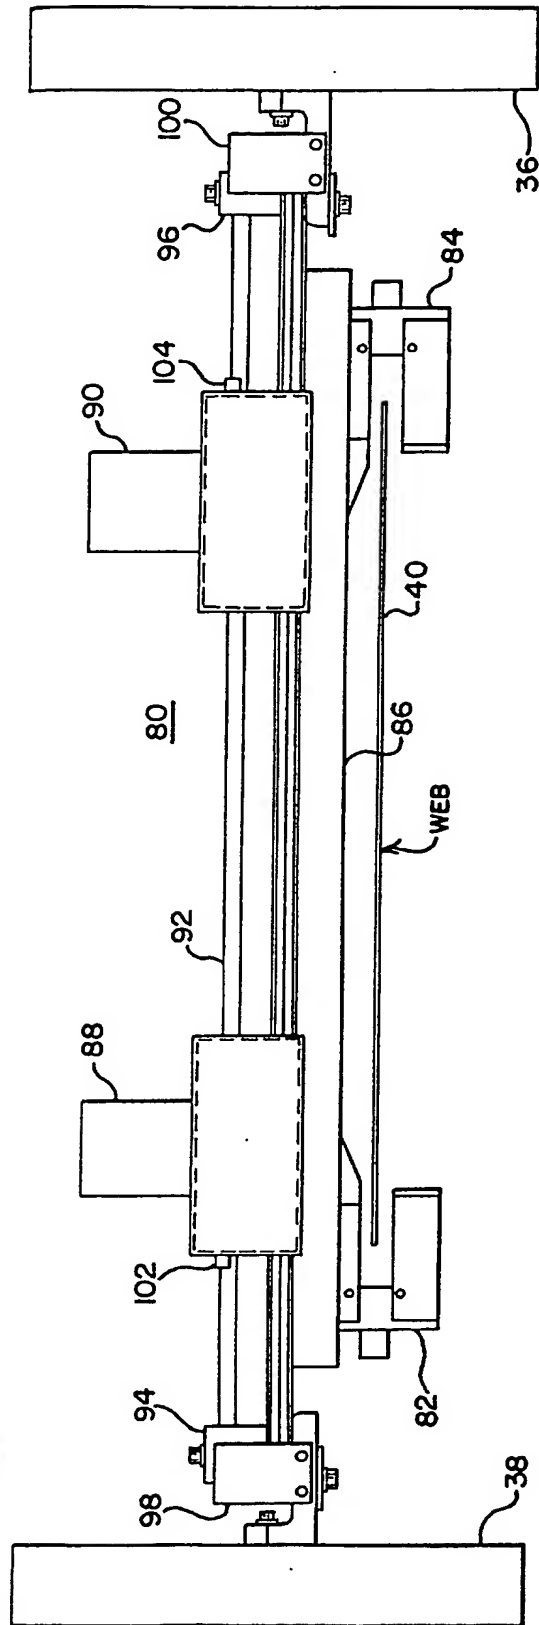


FIG. 4B-

FIG. 4A-



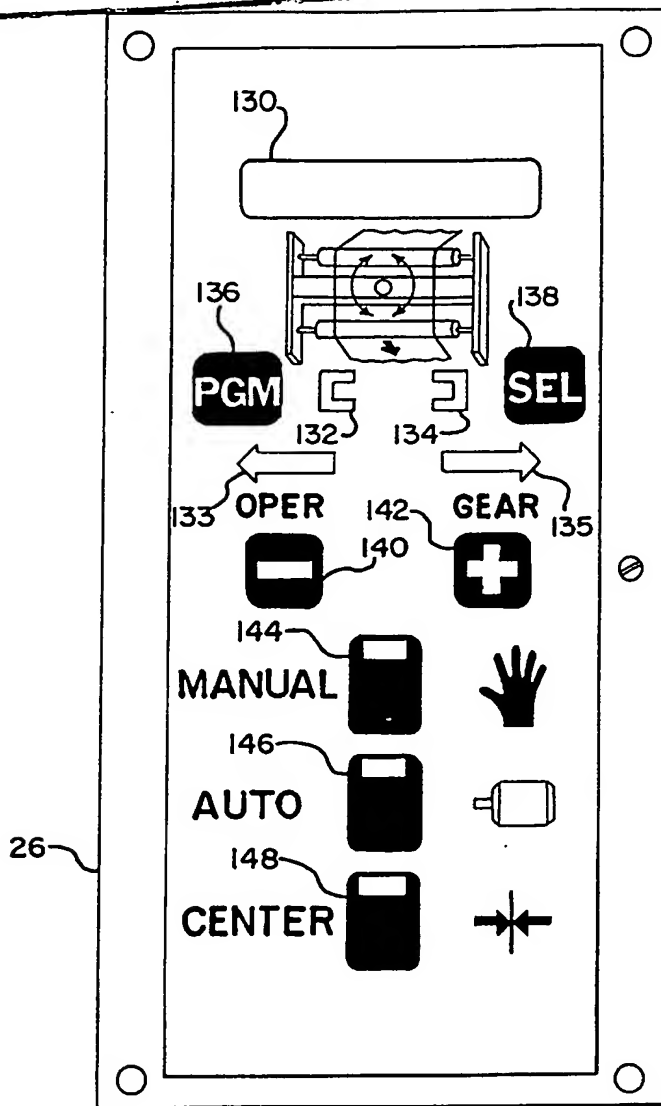


FIG. 5.

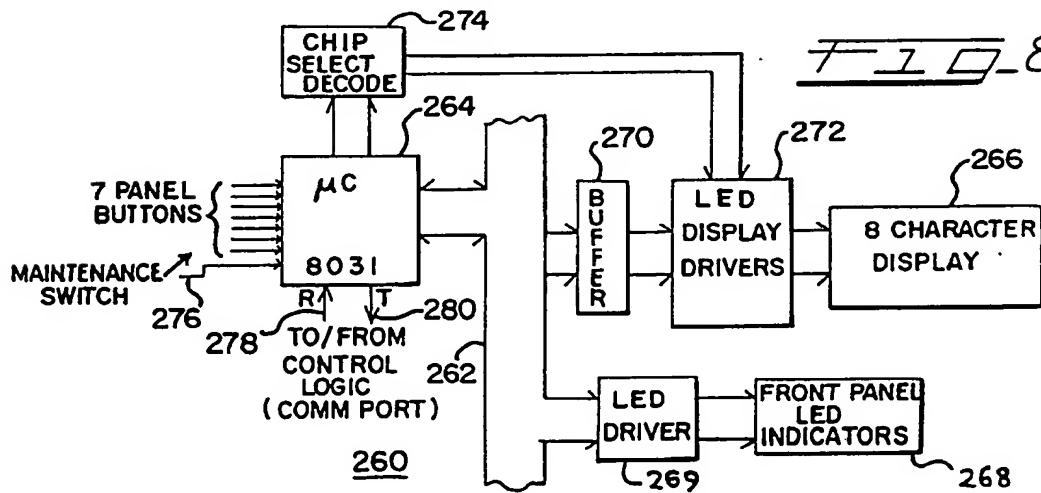


FIG. 8.

FIG-6



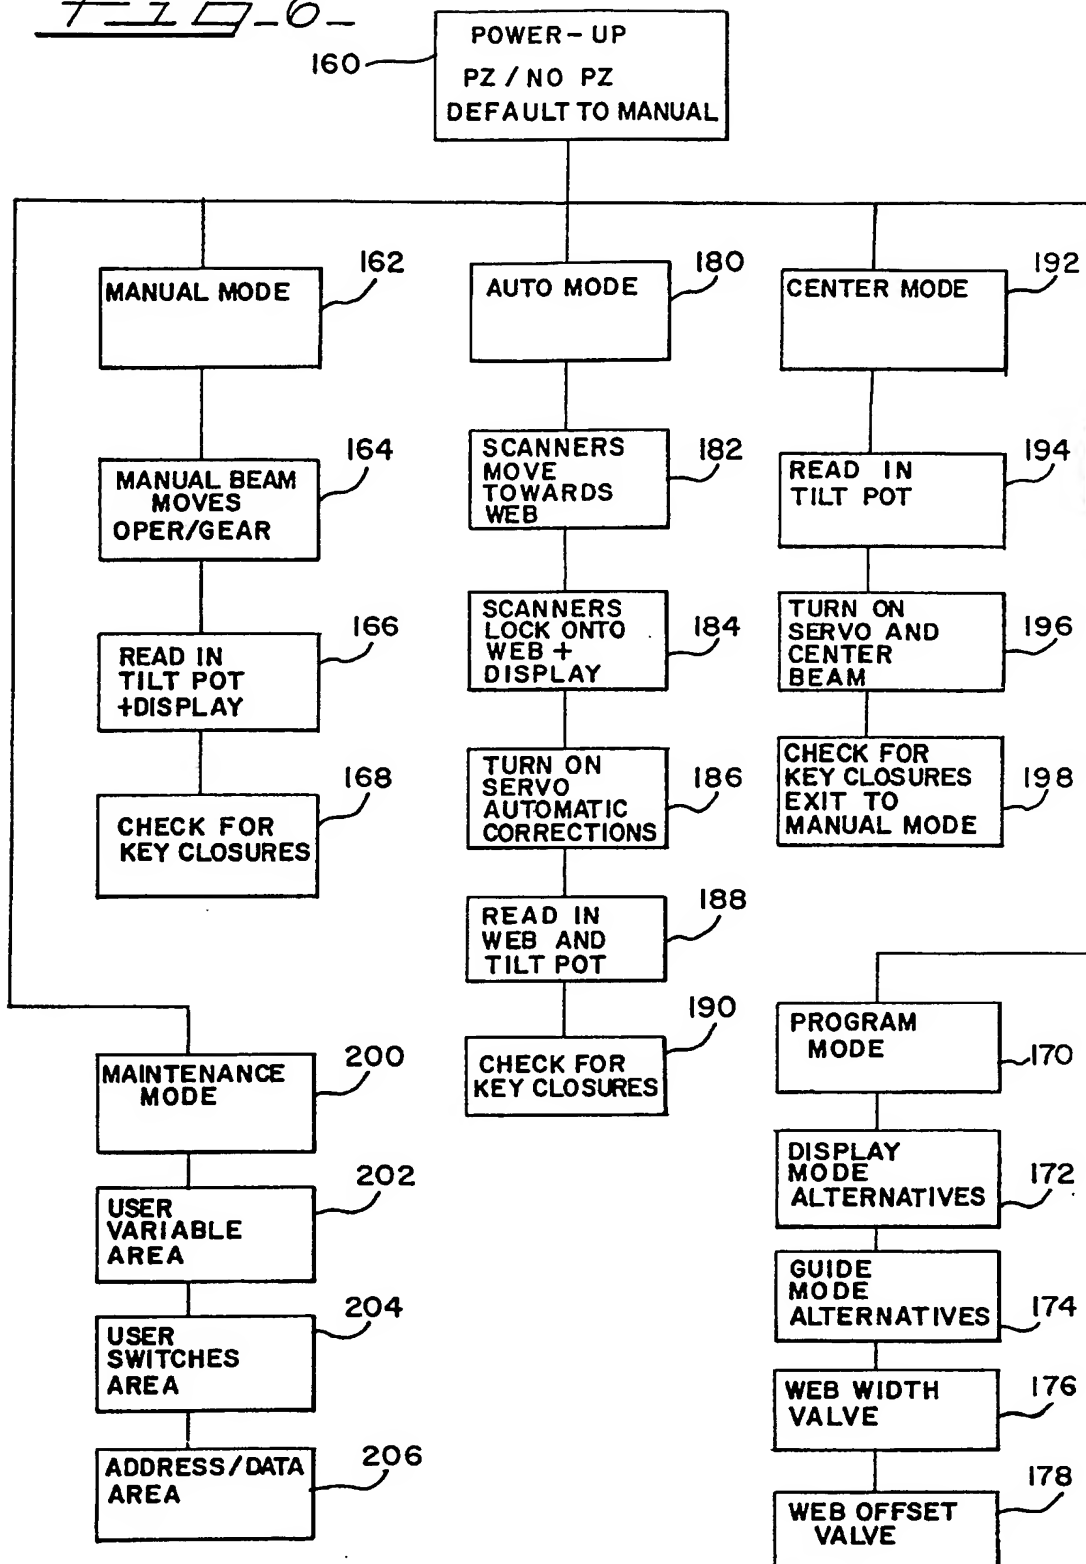


FIG. 7

7-119-9-

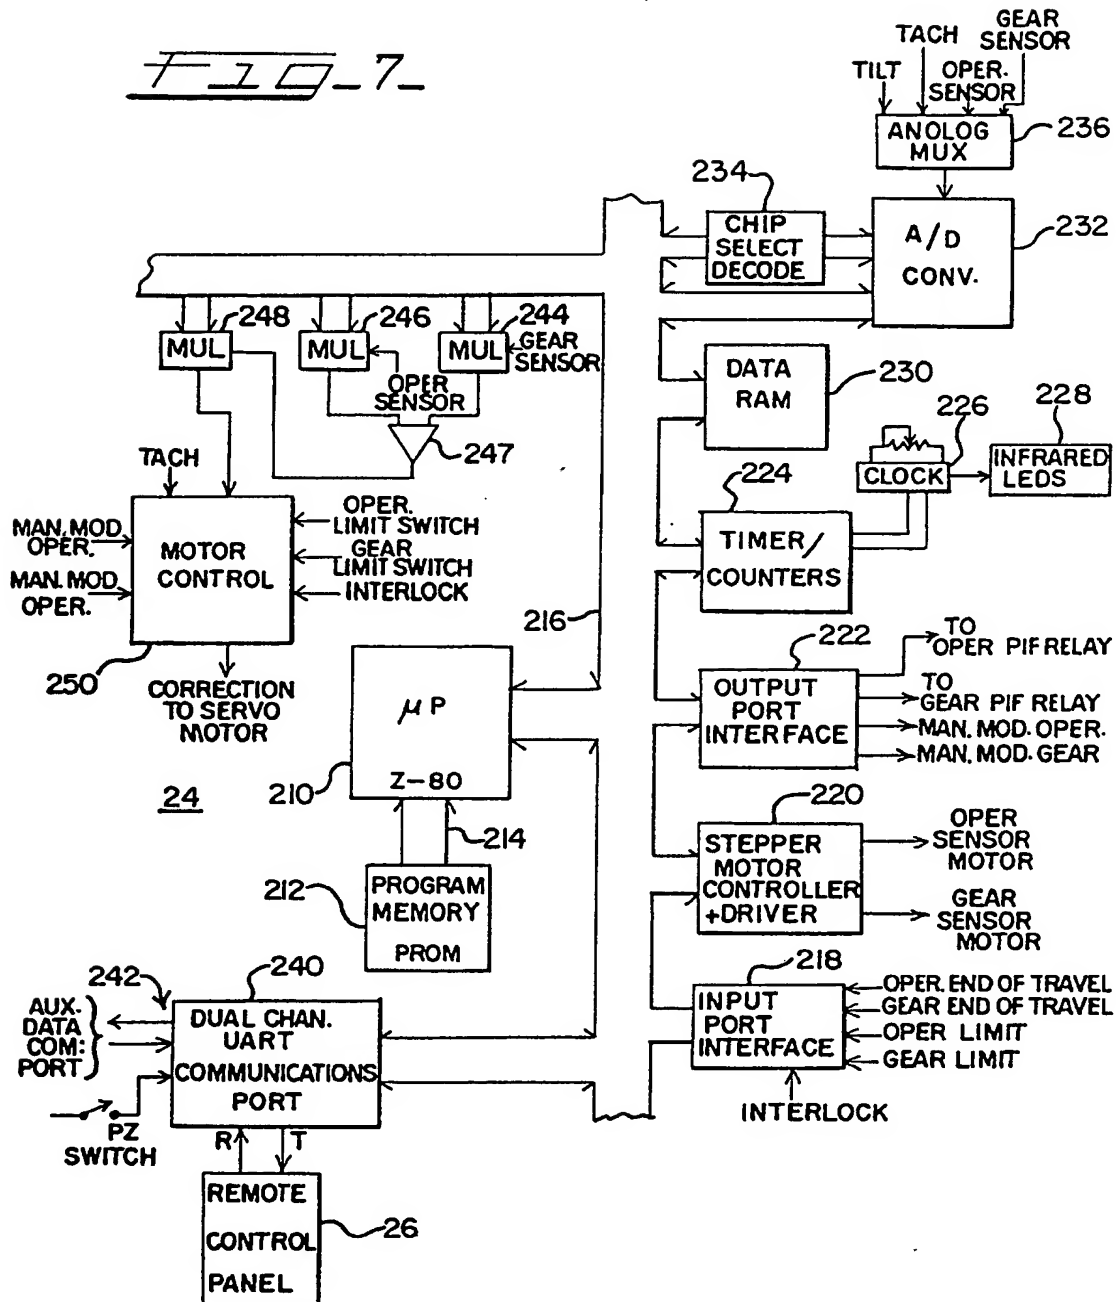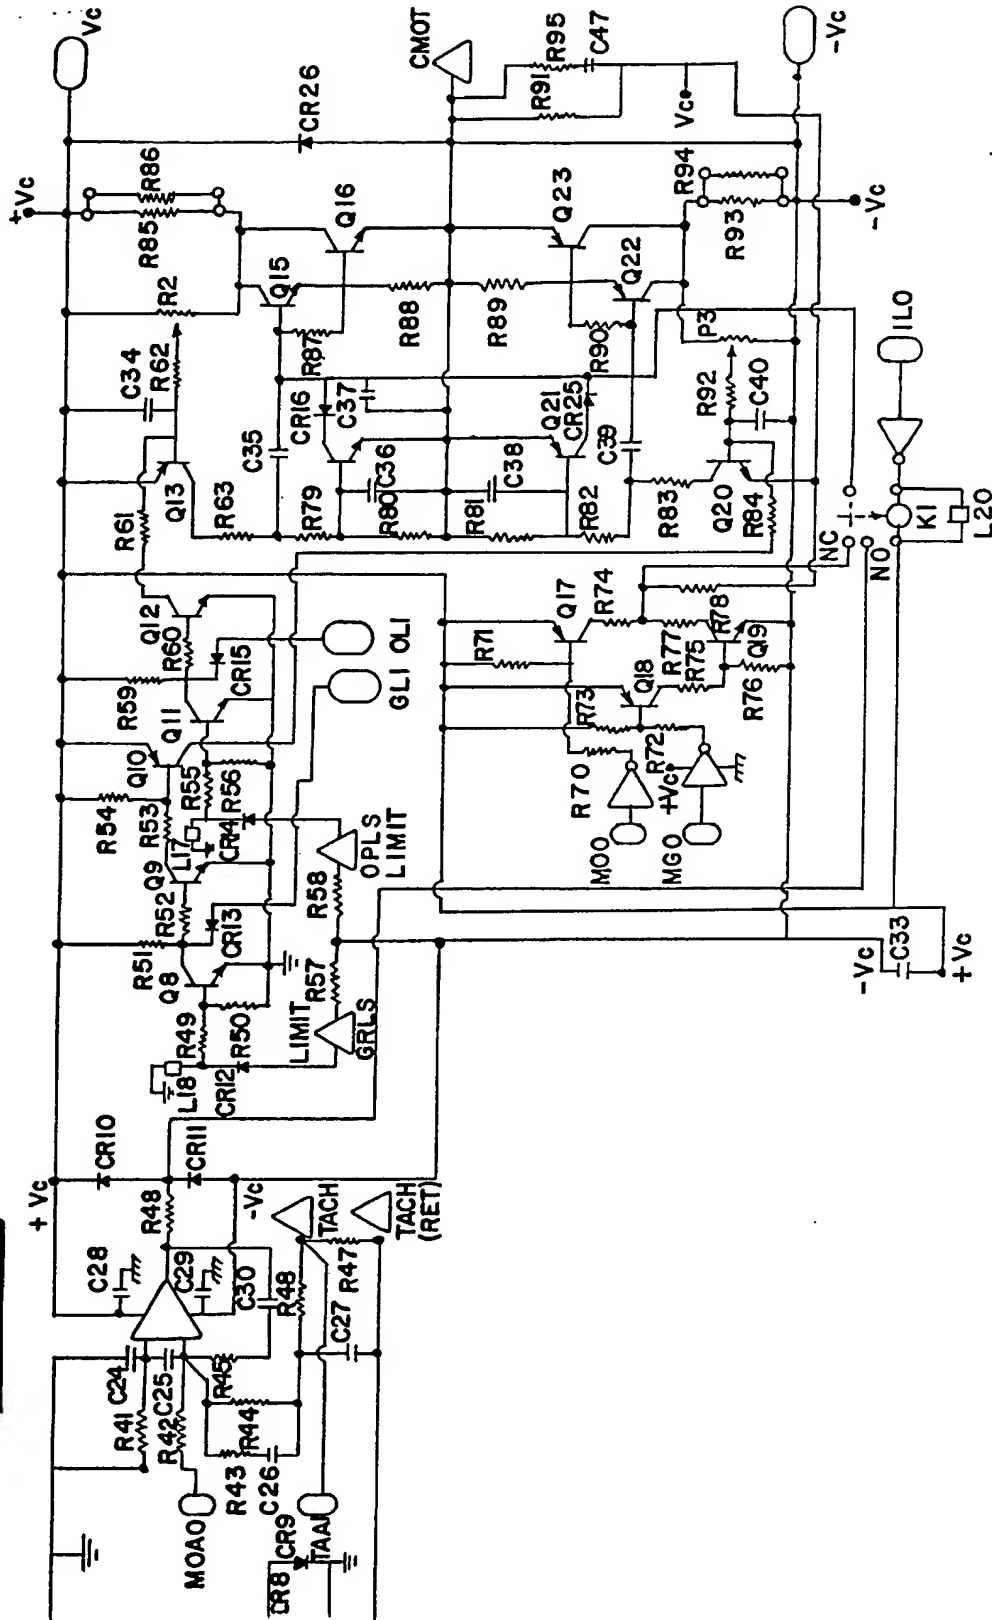

EP 0 367 368 A1

APPENDIX A

: 03000800C36900C9
: 03001000C36900C1
: 03001800C36900B9
: 03002000C36900B1
: 03002800C36900A9
: 03003000C30308FF
: 03003800C3690099
: 10006600C369002A004323220043F3ED56C3000868
: 030076001801006E
: 06080000C30808C32A101F
: 05080600000000000ED
: 10080800F3ED56315E40CDD0FCD1D09CDDFF08CD88
: 10081800AC1006012100FEDB10E601200E237CB597
: 1008280020F310F03E01CD0C0D182006012100FE55
: 1008380008B10E6012815237CB520F510F03E01CD29
: 10084800DC0D2A0E4523220E451800C30C103E0169
: 10085800D310F3ED560E00DB10E601203C0C060125
: 1008680021C0FFDB10E601201DE5C5CD680BCD9443
: 100878001DC1E1237DB420EB10E63E01CD0C0D3E26
: 100888007B32084518443A0845A728083D320845F0
: 10089800200218003E01CDC50DCD3D0FC0D2B0FCD48
: 1008AB004F0F060121C0FFDB10E6012818E5C5CD6F
: 1008BB006808CD941DC1E1257DB520EB10E63E0105
: 1008CB00CDD0D1B053E01CDC50D3EB0D310C356B2
: 0408DB0008F718FD05
: 1008DF0006501C100FB1E1DE91EB31BF814000000EC
: 1008EF0000C2409A4012413A4162418A41000000E1
: 1008FF0000010101010101000001010101020100DC
: 0909CF0000000000000000000DF
: 050918000000000000DA
: 10091D00AF322B453E04324E42DB84E604C03EFF2F
: 10092D00322B45210042110142360001FE05ED808A
: 10093D0021004B110148360001FE17EDB0211008C2
: 10094D00110048015300EDB0212848222546110021
: 10095D004821020B06057EB728064F1AED791323A1
: 10096D0010F43E04322146D3A83E02322046210720
: 10097D00082248423E09324D423E05324E423E461F
: 10098D001E05CDE10C2277463E461E05CDE10C221B
: 10099D002C463EFF322B453A094811EB03CDF10CA8
: 1009AD001600226046ED5362463A0A4811401FCDA8
: 1009BD00F10C6C63110000224546ED53474611457D
: 1009CD0046216046CD840D2A6046ED5B6246CB3AEA
: 1009DD00CB1BCB1CCB1D224546ED5347463A404819
: 1009ED0011F401CDF10C1600224946ED534B462171
: 1009FD000000224F462A4148CB3CCB1D224D4611CB
: 100A0D004D46214946CD840D114946214546CD8F90
: 100A1D000D2A454611EB03CD440D7B728013D3221
: 100A2D006446473A4348CB7F2006B8380B7B1B0800
: 100A3D00ED44B8390378ED44324348CB7F2802ED8E
: 100A4D004411EB03CDF10CED5B4448CB7A2807E562
: 100A5D00210000ED52D119110000224D46ED534FEA
: 100A6D0046214946114546CDAB0D2151461145460E
: 100A7D00CDAB0D214546114D46CD840D2149461175
: 100A8D004D46CD8F0DED5B454621A983CD190D3A10
: 100A9D004746B72806EB01A98309EBED534546ED13
: 100AAD005B494621A983CD190D3A4B46B72806EB74
: 100ABD0001A98309EB2A45463A4348473A4548B0D0
: 100ACD00CB7F2809ED533B46223D461B07223B4676
: 100ADD00ED533D46ED5B514621A983CD190D3A539A
: 100AED0046B7EB280401A9830911F40119CB25CB05
: 100AFD0014223F46C9A4A0A1A2A353595354454D56
: 0E0B0D002050DA55AA5AA55202040402931B3
: 020530001400AF
: 100B380002383804000304401E103C0300880200C9
: 100B48003C1405041B6340012600000000010064C

:08085800FF0504280502064057
:050863000000000000ED
:100868003A0745CB7F203D2A0045EB3A0745E67F0B
:1008780032003C2A02453A0445B6320445AF320029
:100888003C23187AB3280218423A0445A7C2340C06
:100898003E02CDC50D3A0545F53A400C57F1BAFA73
:1008AB00050C1B532A0045EB2A02453A0745E67F0B
:1008BB0032003C4EAF778E201A3EFF778EC2D80B39
:1008CB0071AF32003C23187AB3281F220245EB2267
:1008DB000045C971AF32003CE5D53E04320445CD2D
:1008EB00DC0D3A05453DD1E118AE3A0445A720A5EC
:1008FB003E04CDC50D189E3E0132400CAF5F160075
:100C08003C32054578CB23835F21410C191E0056DE
:100C180023EB220245EB1E0056237AB7CA9D08EB45
:100C28002200451A320745AF320445C93E02CDDCE1
:100C38000D3A05453DC3A00B094040800010001047
:100C48001000201000802000A02000C0200080207C
:040C580001A02001D6
:100C5C00CDC50CF578CDC70C5FF1C5CDE10CC10C3E
:100C6C00C0D5EB210000A7ED52D1C9CDC50CCDCF1D
:100C7C000CC5CDF10CC10CC0CD6D0C3E009B5FC9F9
:100C8C00CDC50CEBCDCFC0CEBC5CD410DC36A0CCD56
:100C9C00C0CEBCDCFC0CEBC5CD190DC10CC0CD6D72
:100CAC000CE5210000ED52EBE1C9CDD0CEBCDCFC25
:100CB0000CEBC5CD440DC36A0C0FEA7F0ED440C35
:100CCC00C90E9EF57AA7F2DF0CE5210000A7ED5264
:100CDC000EBE10CF1C91600210000C83F300119EB00
:100CEC0029EB20F6C926006C4C44CB3FF53006A707
:100CFC00ED5A798B4FEBAT6AEB78BF47F120EA34
:100D0C0059C9E5CDF10CC1A7ED4AD01CC9010000B1
:100D1C00C5D9D1626AD9CB3ACB1B300DE5D9C10903
:100D2C00D9C5D9C1EBED4AEBD9ED6ACB11CB107B10
:100D3C00B220E3D9C95F16007BB2CA7D0D01010058
:100D4C007AA7FA580DCB21CB10CB23CB121BF1E594
:100D5C00210000E3E5A7ED52DA6D0DE3E1E309E3D1
:100D6C00E5E1CB3ACB1BCB38CB197BB120E6EBE1E4
:080D7C00C921FFF11FFFC9AF
:100D84000604B71ABE77231310F9C90604E5C521A2
:100D940009450E01B71A2FB9770E00132310F6C1E7
:100DA400E111094530DAC906041A77132310FAC988
:0E0DB400E15E2356876F2600195E2356EBE999
:030DC2001B01FF16
:100DC5003A1145B728053D321145C0210D45CDF6EF
:100DD5000D7B2F4EA677C9CDF60D210D453A104554
:100DE500A0A8B6773EFF3211452A0E4523220E45AF
:0A0DF500C906013DF8C8CB201BF92B
:050DF0000000000000EF
:100E0400DB89CB47201C3A07433D320743B7C03246
:100E140003433A4F42FE68C04F3E00324F42C39DE7
:100E24000EC93A2E48320743DB8B4F3A4F42FE68D5
:100E340020083E00324F42C3080F3AFF0DFEFF2048
:100E44000D3E0032FF0DD210050DD22000E3AFFB1
:100E54000D3C32FF0DD5ED58000E791213ED5300FE
:100E64000ED13A0543B92B1779320543FE682007A5
:100E74003E04320443B7C93A2D48320443B7C93A51
:100E840004433D320443B7C03E0132044379FE6853
:100E94002007324F42320443C979FE4820073A50B2
:100EA40042FE01205F79E660FE6028073E00325072
:100EB4004218053E013250423A0343B9202E3A0209
:100EC400433D320243203D3A4542320243473A44CD
:100ED400423D32444220273A5048B8F2020F78CBC0
:100EE4003F3245423A4842324421B123A4642326C
:100EF40002433A47423245423A4842324442793206
:060F0400034337C987C921
:050F0A0000000000000E2
:100F0F00F7CD040E30FAE6771E41B838F31E698BE6

EP 0 367 368 A1

EP 0 367 368 A1

:1012F3002A32462B223246AF323646323123A31C4
:1013030046CB4F2803F71BF63A3146F602323146FB
:10131300CDEE14C4A4133E4AD3192A34462B2234E7
:1013230046AF323746C37B123A3146CB472803F7E4
:1013330018F63A3146F601323146CDE914283FCD4D
:101343009F143E41D315CD9F14CDE91420F83EB35D
:10135300D315CDC514DB145FD5CDC514DB14D1571C
:10136300D5CDC514DB143A3646CB47E1232807EB2A
:1013730021000087ED52ED5B3246192232463A03A3
:1013830047CB5FCA2312210000223246C323123AFD
:101393003146CB4F2803F71BF63A3146F60232317D
:1013A30046CDEE14283FCD87143E41D319CD871423
:1013B300CDEE1420F83EB3D319CD0714DB185FD5B7
:1013C300CDD714DB18D157D5CDD714DB183A374610
:1013D300CB47E1232807EB21000087ED52ED5B3447
:1013E30046192234463A0347CB67CA7812210000D4
:1013F300223446C37B123A3146CB472803F71BF60E
:101403003A3146F601323146CD3D132A3246ED5B81
:101413003A48ED523007ED5B324621000022324656
:101423001BED534546CD9F143E4BD315CD9F143A28
:101433004546D314CD9F143A4646D314CD9F14AFDB
:10144300D314AF323646C323123A3146CB4F280367
:10145300F71BF63A3146F602323146CDA4132A3450
:1014630046ED5B3A48ED523007ED5B344621000010
:101473002234461BED534546CD87143E4BD319CD0D
:10148300B7143A4546D318CD87143A4646D318CDCB
:10149300B714AFD318AF323746C37B120600C5F777
:1014A300C1DB15CB4FC810F63E02328463A010075
:1014B300321B46C90600C5F7C1DB19CB4FC810F66E
:1014C30018E60600C5F7C1DB15CB5720F7CB47C09D
:1014D30010F21BD40600C5F7C1DB19CB5720F7CBA0
:1014E30047C010F218C2DB15CB57C9DB19CB57C95C
:0514F3000000000000F4
:1014FB00AF323846323946F73A3B46CB4F283BAFF9
:101508003239463238463A0147E6EF32D1473A2047
:10151B0048CB6F2006CDBA11CDB011AF3268462A6C
:1015280051482269463A5F46CB7F28021808B72B7
:1015380009E60F322146AF325F4606823A2046FE5A
:101548000228070608B7280206803A3946A08B208C
:101558001A3A3846CBFF3238463A3A46B7200C2A70
:1015680032462241462A34462243462A1D462B2229
:101578001D46CB453A3946280FCB3FCB3FCB3FCB17
:101588003FE607CDB40DA515E607CDB40D9715B305
:10159800152217D7172B19E019B41A601BB3157C40
:1015A80017501B9619071AB41A601B3A3846CB47D1
:1015B800C20116AF326546CDE914C2FF14CDEE1450
:1015C800C2FF143A6846B720202A69462B2269468A
:1015D8007DB4C2FF14211400CDD711211400CD2CE3
:1015E800123E01326846C3FF14CD2311AF3268465C
:1015F8002A5148226946C3FF143A3A46B73A394B4D
:101608002003A4B48322F463230463A2048E642C9
:10161800200DCB6FC257193A0347CB6FC2AC163AAD
:101628002048E6182B473A3A46B72B413E663239F4
:10163800463A2146CB4F2017CD2B132A4146ED5B66
:101648003246B7ED5228053B03CDD7113A2146CB9B
:1016580047C2FF14CD92132A4346ED5B3446B7EDDB
:1016680052CAFF14DAFF14CD2C12C3FF143E1132F4
:1016780039463A3846CB873238462A3748221D46FB
:101688003A2146CB4F200CDD2B1321FFFFCDD7118C
:101698003A2146CB47C2FF14CD921321FFFFCDD2C30
:1016A80012C3FF143A3A46FE01C2FF143A6546CB0C
:1016B80047C2FF14CB73265463A2146CB4F202894
:1016C800CD2B132A4146ED5B3246B7ED522816382A
:1016D800143A2048CB5F200AED5B3A48ED522805C2
:1016E8003803CDD7113A2146CB47C2FF14CD92130B
:1016F8002A434AFD5B3446B7FD52CAFF14DAFF144D

:101708003A2048C85FC21C17ED52CAFF3E
:1017180014DAFF14CD2C12C3FF143A2048E64220F5
:10172800083A0347C86FC22B1A3A1E46FE00201C0C
:101738003A1D46FE0020153A3846CBF7323846CDDA
:101748008A11CDB011AF323946C3FF143A2146CB8C6
:101758004FC2411BE6F0FE40C24118D3A600DBA6EE
:10176800EE80CB7FC241183A39463C323946CD2B00
:1017780013C341183A2048E64220083A0347C86FB2
:10178800C22B1A3A1E46FE00201C3A1D46FE0020B7
:10179800153A3846CBF7323846CDBA11CDB011AF5D
:1017A800323946C3FF143A2146CB47C2BA1BE6F0BD
:1017B800FE30C2BA18D3A600DBA6EE80CB7FC2BA11
:1017C800183A3946C610323946CD9213C3BA183A7B
:1017D8002048E64220083A0347C86FC22B1A3A2129
:1017EB0046CB4FC2411BE6F0FE40C24118D3A600CE
:1017FB00DBA6EEB047CB7F2802ED444F3A2048CB4A
:101808007720233A3A46B73A4C4820033A4D48B92C
:10181800DA2E183A2F4630322F46200A3A3946CB5F
:10182800DF3239461813A3A648B9D24118CB7820F6
:1018380005CDD7121803CD81123A2146E60FF6508E
:10184800322146D3A8C3FF143A2048E64220083A7A
:101858000347C86FC22B1A3A2146CB47C2BA1BE6CB
:10186800FOFE50C2BA18D3A600DBA6EEB047CB7FA5
:101878002802ED444F3A2048CB7720233A3A46B71E
:101888003A4C4820033A4D48B9DAA7183A30463D51
:10189800323046200A3A3946CBFF3239461813AD5
:1018AB003648B9D2BA18CB782005CD01131803CD24
:1018EB00AC123A2146E60FF640322146D3A83A3B10
:1018CB0046CB7FC2411BE6F0FE40C24118D3A600CE
:1018D8003A46CB47283C2A3246ED5B3846ED52EB75
:1018EB002A3446ED483D46B7ED4219CB7C2806EB32
:1018FB00210000ED52ED5B4948B7ED5238143E1017
:10190800323846AF3239463A0147E6EF320147C32B
:10191800FF143A3A46B728373E33323946C3691975
:101928003A2048E64220083A0347C86FC22B1A3ABE
:101938002146CB4F200C2A3246ED5B4146B7ED52B8
:10194800202F3A3946CBDF323946CB7FC2411BE6CB
:10195800803238463E443239463A2048CB4F3220AE
:10196800483A2146D3A83A0147F610320147C3FF47
:1019780014CB7C3A03472008E602C2FF14CDD712E2
:10198800C3FF14E604C2FF14CD8112C3FF143A202A
:1019980048E64220083A0347C86FC22B1A3A214641
:1019A800CB47200C2A3446ED5B4346B7ED5220085B
:1019B8003A3946CBFF323946C3FF14CB7C3A03474A
:1019CB002008E604C2FF14CD0113C3FF14E602C2C4
:1019D800FF14CDAC12C3FF143A2048CB4F20083A6D
:1019EB000347CB6FC2171A3A2146CB4FC2FF142ABE
:1019FB003246ED5B4146B7ED52C27919C3FF143A3E
:101AC8002048CB4FC29C1A3A0347CB6FCA9C1A3A5C
:101A18003A46CBFF323A462A32462241462A3446D3
:101A28002243463A0147E6EF3201473A2048CB5F66
:101A3800C2621A3A2146CB4FC2B133A2146CB47EB
:101A4800CC92133A2048CB572B103A2146CB4FCC9A
:101A5800F9133A2146CB47CC4C143E553239463E11
:101A6800203238463A2148CB4728083A0147E6EF5F
:101A7800320147C3FF143EFFF3A3A2146325F46E2
:101A88003E67322146D3A83A0147E603F6103201F1
:101A980047C3FF143A2146CB47C2FF142A3446ED08
:101AAB005B4346B7ED52C2C319C3FF143A5F46CB36
:101AB8007F202FB728463A2146FE67C2FD1AD3A6D3
:101AC80000DBA6EEB0202E3A5F463221463A0048D7
:101AD8000D3A43A0147E6EF3201473EBA325F46C354
:101AEB00FF143D325F46FAFF143A2146D3A8AF32BD
:101AFB005F46C3FF143E67322146D3A83A0347CB58
:101B08006FC2FF143A3846CB4F3238463A5F46CBFD
:101B18007F2806AF325F461808B72805E60F32213E
:101B28004A3A3846CB7F2815347948F857C657197D

: 101B3600C85FC257193A3A46BFF323A462A374862
: 101B4800221D463A3A46B73A394820033A4B48328A
: 101B58002F46323046C327163A2048E64220083A34
: 101B68000347CB6FC22B1ACDE914C2FF14CDEE1474
: 061B7800C2FF14C357195F
: 051B7E00000000000062
: 101B83003A2B458720073A4E42AF324E42F73A4E10
: 101B930042CB4728FB3E02324E42112020ED53003B
: 101BA30046ED530246ED530446ED5306462A484297
: 101BB30006070E01110746E5D5C50600ED8006156B
: 101BC300C5F7C13A4E42CB572805C1D1E1188E1023
: 101BD300EFC1D1E1180C10DF3A4D42D60747E5C5F3
: 101BE300110046010800EDB00615C5F7C13A4E4293
: 101BF300CB572805C1E1C3901810EFC1E12310DED1
: 101C030006070E01E5C5110046480600EDB0C1C543
: 101C1300060021431CED800615C5F7C13A4E42CB71
: 101C2300572805E1E1C3901B10EFC1E1230C10D449
: 101C33003E203200463A4E42CB8F324E42C3901B77
: 081C430020202020202020A019
: 051C4B00000000000094
: 101C5000CD5F1D200CCD1F1D3A2F42323042F718A8
: 101C6000EF2A04422201424FFE012805FE02C2E58E
: 101C70001C1E00CDEB1C6FCDEB1C67CDEB1C47CDD
: 101C8000EB1C7BB7C2E01C79FE012823FE02C2E0FB
: 101C90001C0E06CD051D1E00CDEB1C772310F9CDC6
: 101CA000EB1C7BB7C2E01C0E06CD051DC3C91C0EB7
: 101CB00002CD051D1E004ECD021D2310F97BED4403
: 101CC0004FC0D051D0E06CD051DC3501C3A0342B76E
: 101CD000C8C547D5E5C5F7C110FBE1D1C1C9C1E110
: 101CE0000E15CD051DC35E1CC506780528F0E5D58B
: 101CF000CD5F1DD1E12005CD171D1BEFF5835FF1F4
: 101D0000C1C97BB15FD8B1C8572005CD171D18F53D
: 101D100079D383DC1CC9C5D5E5F7E1D1C1C921A3
: 101D2000014235C02335C02A04422201423E10D36D
: 101D3000823E05D3823E43D3803E07D3803E66D3A6
: 101D400081210B42220942220742AF32064232036E
: 101D500042C921201C2204423E00322F4218C821D1
: 101D600006427EA7281C352A09427E2322094211F9
: 101D70002B42A7ED522006210B4222094267F6FFB3
: 101D80007CC9DB81F5E63028043E45D382F1CB47A0
: 101D9000C8DB83C92106427E7E20C8CDB21DC82132
: 101DA0000642342A07427723220742112B42A7ED2D
: 091D800052C0210B42220742C976
: 051D8900000000000025
: 101DBE0021201C221646221846CD121EF7CD0A1ED1
: 101DCE003A4942FE6328F5110A463E621213010A91
: 101DDE0000210046EDB03E6512210A46060C4E2348
: 101DEE00CDF51D10F918D5DB89CB572005CD041E76
: 101DFE001BF579D38BC9C5E5F7E1C1C9211846356B
: 101EE000C02335C02A1646221846F7F7F7F73E10BC
: 101E1E00D38AAF38A3E43D3883E07D3883E88D336
: 021E2E0089C960
: 101E3000E5470E00D93DCB275F160021731EB7ED95
: 101E4000524D44E1D9D9A035F0A0357AFB7ED52A7
: 101E500038033C18F819D9B72008CB4120043E209C
: 101E60001802C63012130EFF10DBC91027EB0364F6
: 101E700000A000100E5470E00D93DCB275F1600A0
: 101E800021731EB7ED524D44E1D9D9A035F0A030D
: 101E900057AFB7ED5238033C18F819D9C6301213B2
: 101EA0000EFF10E6C9FE012826FE022816FE0328B2
: 101EB0000C7CCB3FCB3FCB3FCB3CDD61E7CE60F40
: 101EC000CDD61E7DCB3FCB3FCB3FCB3CDD61E7D6E
: 101ED000E60FDD61EC9FE0AF2DF1EC6301B02C686
: 041EE000371213C9D9
: 051EE4000000000000F9
: 101EE9003E01721B46AF321C4632014732024732AD

: 101EF9006B46DD210050DD22E51220032E41E3A2C
: 101F09002F483246423A30483247423A31483248FD
: 101F1900423A2146D3A811004821B81F06057E87C6
: 101F290028064F1AED79132310F4CD23113A2B45C6
: 101F3900872820F73A4E42E60320F821C01F22486A
: 101F4900423E09324D423E01324E42F73A4E42E696
: 101F59000320F83A1C4647AF573A1B465F1D88287D
: 101F69001FCB23DD21A71FDD19DD6E00DD23DD6613
: 101F790000117F1FD5E9AF573A1B46321C465F1D3A
: 101F8900CB23DD21B11FDD19DD6E00DD23DD660008
: 101F9900119E1FD5E9F7188B3E01321B46C9CF1F59
: 101FA900332CE62665221A383020472E00279E2238
: 101FB9008B38A4A0A1A2A353595354454D2050DAFC
: 061FC90000000000000012
: 101FCF003A0846E61BF6013208463E463209463AC6
: 101FDF002F483246423A30483247423A3148324827
: 101FEF00423E023238463E04324E423A0147E6E361
: 101FFF003201473A2046B706050E10280B3D06065C
: 10200F000E08280406040E183A2146E6F0803221D5
: 10201F004679F601320846AF322A463E50322946FB
: 10202F00C93A2146E60FF660D3A83221463A034754
: 10203F002147220640CB4F2009214F220620CB57A4
: 10204F00282D3A29463D322946C2FF203A2A46EE2C
: 10205F00FF322A463E5028073E28215722060032DB
: 10206F0029463A0846E61BF601B0320846184DD30D
: 10207F00A600DBA6EEB0322246CB7F2808ED44ED8A
: 10208F00582C461804ED5B7746CDF10C78B7200532
: 10209F007CFE63380226633A2246E680B43222463B
: 1020AF00CB7F213F222003212F22E67FFE05300325
: 1020BF002137223EBC322946AF322A4611004601B3
: 1020CF000800EDB0B720293A2246E67F6F260011AF
: 1020DF0005463E02CD751EED58054621393987ED3C
: 1020EF0052280D7A0630FE35380206357B3206460C
: 1020FF003A0147E6F33201473A0846E61BF601324D
: 10210F000B463A4942324A4247AF32494278B720ED
: 10211F00193A0343B720093267463A4E48326646AA
: 10212F00FE462846FE47CACC21C9FE68282ED64156
: 10213F00F8FE08F0CDB40D1F22C93E02321B46C96E
: 10214F003A2048CB4F3220483E03321B46C93A20D3
: 10215F0048CB4F3220483E05321B46C93A2048CB08
: 10216F00AF3220483E04321B46C93A2048CB4F322B
: 10217F0020483A0347CB5720343A0846E61BF62151
: 10218F003208463A66463D32664620133A6746EB7
: 10219F00FF3267463A4E4828033A4F483266463A6E
: 1021AF006746B7C03A0147F608320147C93A2A468F
: 1021BF00B7C03A0846E61BF621320846C93A204811
: 1021CF00CB4F3220483A0347CB4F20343A0846E68C
: 1021DF0018F6413208463A66463D32664620133A83
: 1021EF006746EEFF3267463A4E4828033A4F483269
: 1021FF0066463A6746B7C03A0147F604320147C907
: 10220F003A2A46B7C03A0846E61BF641320846C998
: 10221F00482149215D214F2148217921CC21682172
: 10222F004F50455220202025434E5452202020252B
: 10223F0047454152202020254F50204C494D4954AD
: 10224F004752204C494D49542020202020202047
: 06225F0000000000000079
: 102265003A1C463259463A0846321A46AF32084683
: 102275003E4E320946214E26224B423E21324D42EB
: 102285003E05324E42AF325546325646325A4632F6
: 1022950073463A3248325846C93A4E42E603C2CCE
: 1022A500233A5A46B7C295233E325A463A554617
: 1022B500CDB40DBA22C0221F2366233A5646C8273A
: 1022C500CB27217726856F7CCE0067110046010458
: 1022D50000EDB03E2012133A5646210048856F7C2A
: 1022E500CE00677E473A5646FE022804FE04200AC1
: 1022F5003A3548D613B83002477778680826003E45



: 1027060022283A23468720173A1F458721FD282821
: 102716000321052C110046010800ED80C3D9273D61
: 1027260020363A20468706050E10210D2C28113DFD
: 1027360006060E0821152C280706040E18211D2C46
: 102746003A2146E6F0803221467932084611004673
: 10275600010800ED80C3D9273D20243A40486F2632
: 10276600001100463E03D301E3E203203462A16C
: 1027760048110446CD6D283E22320746C3D9273A6F
: 102786004348C87F2802ED44B720162A444885B407
: 102796003E00200D21252C110046010800ED801841
: 1027A600326F26001100463E02C301E3E20320218
: 1027B600462A4448110346CD6D283A4348473A45CD
: 1027C60048B0F2D32721224F220646180621224777
: 1027D6002206463A29463D32294620403EF0322915
: 1027E600463A2A463D322A4620323A3348322A466B
: 1027F6003A23468721B52B060C281521C12B060A0C
: 102806003D280D21C82B06093D280521D42B062971
: 1028160022484278324D423E05324E423A494232CE
: 102826004A4247AF32494278B7C878FE68CA322A68
: 10283600D641F8FE08F0CDB40D412852285F285144
: 10284600286C2802294F29C229322AC93E01321B87
: 10285600463E04324E42C33C2A3E02321B463E04EA
: 10286600324E42C33C2A3A23463CFED42001AF3294
: 102876002346FE0320782A6046ED586246C83AC8C0
: 1028860018CB1CCB1D224546ED5347463A4048110B
: 10289600F401CDF10C1600224946ED534846F721C3
: 1028A6000000224F462A4148C83CCB1D224D461103
: 1028B6004D46214946CD840D114946214546CD8FC9
: 1028C6000D2A454611E803CD440D7D8728013D325A
: 1028D6006446473A4348C87F2009B838117B3243D8
: 1028E60048180BED448B838067BED443243483E04A8
: 1028F600324E423E01322946322A46C93A2346876B
: 1029060020123A1F46EE01321F4621FD28282121B7
: 10291600052C181C3DC03A20463CFE033801AF3258
: 102926002046210D2C280921152C3D2803211D2C7C
: 10293600110046010800ED80C3E03229463A334810
: 10294600322A463E04324E42C93A2346FE02F82057
: 102956002E2A4148117D0019EB21E803ED5220187B
: 10296600AF5F573A0948D602473A404888200511A2
: 10297600680318043C32404BED534148C33E29EDF1
: 102986005B4448217D0019EB3A4348B4F29E297D09
: 10299600B420221195FC180A21E803ED522016AF47
: 1029A6005F573A6446473A43488820051168031807
: 1029B600043C324348ED534448C33E293A2346FE7D
: 1029C60002FB20242A414811B3FF19EBC87A2811FB
: 1029D6001100003A4048FE0D28073D324048116871
: 1029E60003ED534148C33E29ED58444821B3FF195B
: 1029F600EB3A4348B485282D3A4348B4F2202A218D
: 102A06001BFCED52201F1100003A6446ED44473A87
: 102A16004348B8200C1195FC180B87A28071168BC
: 102A2600033D324348ED534448C33E293E04321B1E
: 102A3600463E04324E422A6046ED586246C83AC8B6
: 102A460018CB1CCB1D224546ED5347463A40481149
: 102A5600F401CDF10C1600224946ED534846F72101
: 102A66000000224F462A4148C83CCB1D224D461141
: 102A76004D46214946CD840D114946214546CD8F07
: 102A86000D2A454611E803CD440D7D8728013D3298
: 102A96006446473A4348C87F2006B83808781B0877
: 102AA600ED448B8380178ED44324348C87F2802ED37
: 102AB6004411E803CDF10CED584448C87A2807E5D9
: 102AC600210000ED52D119110000224D46ED534F61
: 102AD60046F7214946114546CDAB0D2151461145D4
: 102AE60046CDAB0D214546114D46CD840D214946B7
: 102AF600114D46CD8F0DF7ED5B454621A983CD19C6
: 102B06000D3A4746872806EB01A98309EBED534575
: 102B160046ED58494621A983CD190D3A4B468728A8

:102B260006EB01A98309EB2A5...48473A454D
:102B360048B0C87F2B09ED533B46223D461B072275
:102B46003846ED533D46ED5B514621A983CD190D1C
:102B56003A5346B7EB2B0401A9830911F40119CB4E
:102B660025CB14223F46C9CB7C2B074D44210000C3
:102B7600ED427DB42B0C017D00AF3CB7ED42FBC2B2
:102B8600802B47B080219A2B856F7CCE00670103BE
:102B960000EDB0C92020A0312FB8312FB4332F8BA3
:102BA600312FB2352FB8332FB4372FB882020A04499
:102BB6004953504C4159204D4F444547554944458A
:102BC600204D4F44455745422057494454485745A0
:102BD600422043454E5445524C494E4520544F20C1
:102BE600505245532043454E5445524C494E4549
:102BF600204F46465345542054494C5420252057CF
:102C0600454220504F53204F5020454447452047CA
:102C1600522045444745202043454E5445522020E6
:072C2600205A45524F202007
:062C2D0000000000000A1
:102C33003A0846E61BF602320846326D463E4632FB
:102C430009463A0748326E463E01326F463E00322D
:102C530070463272463A09481EFFCDE10C3E8DCDD7
:102C6300410D7D32384B3E0032374B3A46483246B5
:102C7300423A47483247423A4848324B42AF323AEA
:102C8300463A2048E642CAF2C3A0347C86FCAA765
:102C93002C2A3B462241462A3D462243463E0132EB
:102CA3003A461B083A0347E606C24533A0047E66E
:102CB300CF3200470619C5F7C110FB3A2146CB4F67
:102CC3002022E60FF640D3A83EB0D3A1F7D3A60077
:102CD300DBA6EEB0F2DC2CED4B73A0248D3A13EEA
:102CE30010FA512D3A2146CB472022E60FF650D356
:102CF300A83EB0D3A3F7D3A600DBA6EEB0F2052D72
:102D0300ED44B73A0448D3A33E08FA512D3A00479D
:102D1300F630320047060FC5F7C110FB3A2048CB07
:102D23005FC2F42DCB6FC2F42D3A2146CB4FC2D0F4
:102D33002DE60FF640D3A83A3548D3A1F7D3A60022
:102D4300DBA6EEB03A0248D3A13E10FAD02D326CB6
:102D5300463E8C3229463A0846326D463A6B463C2B
:102D6300326B463A6B46FE0321BF373E1B380521F3
:102D7300AA373E1E224842324D423E05324E42F7A7
:102D83003A29463D322946C29D2D3EBC3229463A8B
:102D93006C46473A0846A83208463A4942FE412B5B
:102DA300093A4E42E60328B81BD53E01321B463A8B
:102DB3006D463208463A2F483246423A3048324747
:102DC300423A31483248423E04324E42C93A2146E1
:102DD300CB47201DE60FF650D3A83A3548D3A3F7C7
:102DE300D3A600DBA6EEB03A0448D3A33E08F251F3
:102DF3002D3E013238463E013224463E04324E42D5
:102E0300AF322346322A46322546326B463E0532DE
:102E130029462A374B221D453A3A46B706043A3924
:102E23004820053A1B480600322F463230467B3266
:102E33002846CB210138224B423E09324D423E0505
:102E4300324E42C93A3846CB6F2B073A3A46B7CA9B
:102E5300AD2D3A3846CB672B2221E637224B423E36
:102E63000F324D423E05324E42F73A4942FE41CAC5
:102E7300AD2D3A4E42E60328E01BEE3A2346B7C29B
:102E8300A5303A3846CB7F2B0D3E013223463EFF1C
:102E9300322846CB89343A03472114370640CB4FBF
:102EA300200A211C370620CB57CAEA2E3E04324E95
:102EB300423A29463D322946C2B1303A2A46EEFF3C
:102EC300322A463E5028073E2B216437060032291D
:102ED300463A0846E61BF602B032084611D04601A3
:102EE3000800EDB0C381303A0846E61BF60232080E
:102EF300463A2546B7CA192F21443711D04601081F
:102F030000EDB01105466F26003E02CD751E3E044E
:102F1300324E42C381303A4E42E603C2B1303A2B0F0
:102F230046B7C2B72F3A3A46B7CA68303A0347CB07
:102F33006FCA6830CDE9142031CDEE14202C3A2924

: 102F33004FCA6830CDE9142031...202C3A2924
: 102F4300463D322946C2B1303A2A46EEFF322A46AE
: 102F3300210C373EA028053E902164373229461103
: 102F6300046010800ED80C3B1303A3A46FE012B1D
: 102F73001321CB372248423E0F324D423E05324E9B
: 102F830042C378303A2B46B7CA56303D20113A2713
: 102F9300463D322746C2B130AF322846C3B1303D99
: 102FA30020603A4348CB7F2802ED44B720162A44D9
: 102FB30048B5B43E00200D215C37110046010800DE
: 102FC300EDB01B326F26001100463E02CD301E3E92
: 102FD300203202462A4448110346CD6D2B3A43481A
: 102FE300473A4548B0F2F32F21224F2206461B06EE
: 102FF3002122472206463EFF3227463E013228461B
: 103003001B7C3D20213A27463D322746C2B1302194
: 103013000A3B2248423E0A324D423E05324E423E70
: 10302300023228461B583A40486F26001100463E9F
: 1030330003CD301E3E203203462A4148110446CD8B
: 103043006D2B3E223207463EFF3227463E0332288F
: 10305300461B2B217C37224B423E13324D423E050C
: 10306300324E421B19216C37224B423E10324D42EB
: 103073003E05324E42AF322A463E503229463A3856
: 1030830046CB77CAB93421D737224B423E0F324D54
: 10309300423E05324E42F73A4E42E603C29930C3EE
: 1030A3004535FE01C2E333A2B46FEFF20483E047D
: 1030B300324E42F73A4E42E60320F80602C5210497
: 1030C30037110046010800EDB006C8C5F7C110FB73
: 1030D300216437110046010800EDB00650C5F7C161
: 1030E30010FBC110D83E033228463E05322946AFB5
: 1030F300322A46C397343A2246CB7F20173A0548F3
: 10310300473A2246E67FB830233A0147E67C32014C
: 1031130047C330323A0648473A2246E67FB8D2B030
: 10312300313A0147E67C320147C330323A0848FE60
: 10313300002B413A6F46FE01280FB73A7246FE80D7
: 10314300DA2C32AF3272461B0DB73A7246FE05DA00
: 103153002C32AF3272463A6E4647FE002802101FE9
: 103163003A6F46FE012039AF326F463A084B326E55
: 1031730046C398313A0147F602320147C3303278E9
: 10318300326E463A6F46FE01200B3A0147F6023291
: 103193000147C330323A0147E67C320147C330323C
: 1031A3003E01326F463A0748326E461BDD3A08480B
: 1031B300FE00283F3A6F46FE01280FB73A7246FEDB
: 1031C30080DA2C32AF3272461B0CB73A7246FE05DB
: 1031D3003857AF3272463A6E4647FE002802101D3A
: 1031E3003A6F46FE012035AF326F463A084B326ED9
: 1031F300461B1F3A0147F6013201471B3078326EFC
: 10320300463A6F46FE01200A3A0147F6013201476A
: 103213001B1B3A0147E67C3201471B113E01326F11
: 10322300463A0748326E461BDF3C3272463A284621
: 103233003D322846FE02F29734CDB40D413254326A
: 1032430045323A2146E60FF670322146D3A8C3979A
: 10325300343A3C483228463A03472114370640CB0B
: 103263004F2009211C370620CB5728363A29463DE3
: 10327300322946C2B9343A2A46EEFF322A463E057F
: 1032830028073E0221643706003229463A0846E6FB
: 103293001BF602B0320B46110046010800EDB0C32B
: 1032A300B9343E05322946AF322A463A2546B72B75
: 1032B30019214437110046010800EDB01105466F8E
: 1032C30026003E02CD751EC39734D3A600DBA6EEBF
: 1032D30080473A2146E60FF660322146D3A87B327A
: 1032E3002B46CB7F2802ED445F3A3E48CDE10C3A82
: 1032F3003F48477C9067300226003A2B46E6B0B46D
: 10330300322B460640CB7F200206207CB7200206E4
: 10331300003A08464FE61BF6025F79A0280F3A2EC6
: 1033230046B72B123D322E46200C0600607B803291
: 1033330008467C322E46D3A600DBA6EEB03222461B
: 10334300CB7F2808ED44ED5B2C461B04ED5B7746F4
: 10335300CDF10C7B8720057CFE62380226633A224E

:10335300CDF10C78B720057CFE62360226633A224E
 :1033630046E680B43222463A1F46B72829213C3725
 :10337300110046010800EDB03A2B46062BC87F28FF
 :1033830002062DE67F6F26001104467812133E02D3
 :10339300CD751EC389343A2246C87F21343720037F
 :1033A300212437E67FFE053003212C371100460127
 :1033B3000800EDB03A2246E67F6F26001105463E2F
 :1033C30002CD751EED58054621393987ED52281044
 :1033D3007A0630FE353802063578320646C38934EC
 :1033E300FE02C2443A3846C86F2007AF3223463D
 :1033F300C38934CDE914200ACDEE142005AF32232E
 :1034030046C93A254687281E21443711004601080C
 :1034130000EDB01105466F26003E02CD751E3E0439
 :10342300224E42C3B9343A4E42E603C2B93421C8DC
 :1034330037224B423E0F324D423E05324E42C3B914
 :1034430034FE03C297343A4E42E603C2B9343A1FFC
 :1034530046B7214C3728032154371100460108091
 :10346300EDB03A29463D322946C2B9343EF03229FD
 :10347300463A2A463D322A46C2B9343A3348322ABA
 :103483004621F537224B423E0C324D423E05324E29
 :1034930042C3B9343A3846C86F281B3E0232234627
 :1034A300AF3228463A0147E67C3201473A0846E6FE
 :1034B3001BF602320B463A494247AF3249427887D2
 :1034C30020333A0343B720153267463225463A4E36
 :1034D300483266463A0147E6F3320147C9473A2381
 :1034E30046B7C03A3A46C87FC078FE46CA7036FE2E
 :1034F30047C4FC35C9FE68CAE436D641FBFE08F06F
 :10350300CDB40D0835453518356E359435CD357048
 :1035130036FC35E4363A2346FE03C03A5E46322390
 :10352300463E04324E423E01322946AF322A463AE3
 :1035330046483246423A47483247423A4848324878
 :1035430042C93E01321B463A2F483246423A30487E
 :103553003247423A31483248423A0147E67C320127
 :1035630047AF322A463E50322946C93A2346FE0324
 :10357300C83E05321B463A2F483246423A3048325B
 :1035830047423A31483248423A0147E67C320147E2
 :10359300C93A2346FE03C83A2346325E463E033207
 :1035A30023463E04324E423E01322946322A463AEF
 :1035B3002F483246423A30483247423A314832483D
 :1035C300423A0147E67C320147C93A2346FE03C02B
 :1035D3003A1F46EE01321F46214C3728032154374B
 :1035E300110046010800EDB03EF03229463A334857
 :1035F300322A463E04324E42C93A2346FE03C88736
 :1036030020423A3A46C87F203B3A0347C84F202B0D
 :103613003A66463D32664620133A6746EEFF326706
 :10362300463A4E4828033A4F483266463A67468709
 :1036330020093A0147F604320147C93A0147E6F83C
 :10364300320147C93A3D48473A25468BF03C32254E
 :10365300463A2146C84F20072A4146282241463A80
 :103663002146C847C02A434623224346C93A234631
 :10367300FE03C88720423A3A46C87F203B3A0347B2
 :10368300C85720283A66463D32664620133A6746AF
 :10369300EEFF3267463A4E4828033A4F48326646B1
 :1036A3003A67468720093A0147F608320147C93A53
 :1036B3000147E6F7320147C93A3D48473A2546883C
 :1036C300F03C3225463A2146C84F20072A4146237B
 :1036D3002241463A2146C847C02A43462B22434642
 :1036E300C93E04321B463A2F483246423A304832EA
 :1036F30047423A31483248423A0147E67C32014771
 :10370300C9204C4F434B4544A020524541445920C6
 :10371300AD4F50204C494D49544752204C494D49E4
 :10372300544F50455220202025434E5452202020F0
 :1037330023474541522020202557454220206E6EB6

:10374300204D4F5645206E6E202054494C54202561
:103753002057454220504F532020205445524F2096
:103763002020202020202020205343414E4E45522C
:1037730053205345454B494EC75343414E4E455243
:10378300532050524553455454494EC75343414E19
:103793004E4552204641554C5420434C45414E2002
:1037A3005343414E4E45D25343414E4E455220461C
:1037B30041554C542043414C4C204D41494E5441BA
:1037C3004E454E43C542454C4F5720494E544552F2
:1037D3004C4F43C85345454B494E472054494D45EB
:1037E3004F55D457454220574944544B20455252D7
:1037F3004FD2444953504C4159204D4F44455745AE
:103803004220574944544B204F46465345542020AC
:013813002094
:06381400000000000000AE
:10381A003A0846E61BF6043208463E463209463E5B
:10382A0002323846F7F73A0147E6EF3201473A20C3
:10383A004BC87F28293EFFD3A43A2146E60FF660FB
:10384A00322146D3A83E0832014732746621E5396F
:10385A00224P423E27324D423E05324E42C93EFF7E
:10386A00D3A43E67D3A83A0147E603F610320147CC
:10387A0021CC39224B423E09324D423E05324E425C
:10388A00C93A2048CB7FCA21393A7446FE082042F9
:10389A003A0347E604CA7E39D3A600DBA6EE80CBFC
:1038AA007F2802ED443275463A75461E0ACDE10C70
:1038BA003E14CD410D7D215014CD410D3E02CD4126
:1038CA000D7D1E05CDE10C222C463E043201473205
:1038DA0074463A0347E602CA7E39D3A600DBA6EE4F
:1038EA0080CB7F2802ED443276463A76461E0ACDD0
:1038FA00E10C3E14CD410D7D215014CD410D3E0207
:10390A00CD410D7D1E05CDE10C2277463A2048CBEC
:10391A00BF322048C36B383A4E42E6032056060280
:10392A00C521D539110046010800ED800650C5F7BA
:10393A00C110FB21DD39110046010800ED8006284F
:10394A00C5F7C110FB8C110D83A2048CB472025AF94
:10395A0006054FC5F7C1D3A600DBA6EE80CB7F2BAC
:10396A0002ED44FE002804FE01200910E63A004850
:10397A00D3A4182E3A4942324A4247AF3249427BD2
:10398A00B7CBFE682836D641FBFE08F0CDB40D98BC
:10399A0039AC39AB39AB39AB39AB39AB39AB39C6E1
:1039AA0039C93A0147E6EF320147060AC5F7C1109D
:1039BA00FB3A2146D3A83E01321B46C93E04321BB8C
:1039CA0046C943454E544552494EC743454E544550
:1039DA005245C4202020202020A043414C4942A7
:1039EA00524154494E472054494C54204741494E6C
:1039FA0020504152414D455445525320284143508D
:023A0A0047A9CA
:00000001FF

EP 0 367 368 A1

APPENDIX B

MCS-51 MACRO ASSEMBLER REMV3

ISIS-II MCS-51 MACRO ASSEMBLER V2.1
 OBJECT MODULE PLACED IN :F0:REMV3.OBJ
 ASSEMBLER INVOKED BY: ASM51 REMV3.MAC

LOC OBJ

```

0020      17      BIT0      EQU      20H
0032      18      MESS0     EQU      32H
0033      19      MESS1     EQU      33H
0034      20      MESS2     EQU      34H
0035      21      MESS3     EQU      35H
0036      22      MESS4     EQU      36H
0037      23      MESS5     EQU      37H
0038      24      MESS6     EQU      38H
0039      25      MESS7     EQU      39H
003A      26      MESS8     EQU      3AH
003B      27      MESS9     EQU      3BH
003C      28      TIME      EQU      3CH
003D      29      LCHMSD    EQU      3DH
003E      30      LCHLSD    EQU      3EH
003F      31      KEYM      EQU      3FH
0040      32      DPLYM     EQU      40H
0007      33      STCK      EQU      07H      ;                003
008D      34      RELOAD    EQU      8DH
          35      ;+++++
          36      ;+++
          37      ;+++
          38      ;+++
          39      ;+++++
00FF      40      PAUSE1     EQU      0FFH
00FF      41      PAUSE2     EQU      0FFH
0040      42      DELAY      EQU      40H
00FF      43      XLNGTH     EQU      0FFH
          44      ;+++++
          45      ;
          46      ;-----
0000      47      ORG        00H
          48      ;-----
0000 020050 49      START:  LJP      INITL
          50      ;+++++

```

MCS-51 MACRO ASSEMBLER RENV3

PAGE

LOC	OBJ	LINE	SOURCE
		51	***
		52	***
		53	***
		54	*****
		55	;
		56	;
0023		57	ORG 023H
		58	;
0023 02021A		59	SERPR: LJM INTRPT ; JUMP TO RECEIVE MESSAGES
		60	*****
		61	***
		62	***
		63	***
		64	*****
		65	;
		66	;
0050		67	ORG 50H
		68	;
0050 753DF4		69	INITL: MOV RELOAD, #0F4H ;
0053 758107		70	MOV SP, #STCK ;
0056 759000		71	MOV P1, #00H ;
0059 75A000		72	MOV P2, #00H ;
005C 75B000		73	MOV P3, #00H ;
005F D2B0		74	SETB P3.0 ;
0061 D2B1		75	SETB P3.1 ;
0063 D2B6		76	SETB P3.6 ;
0065 75B920		77	MOV TMOD, #20H ;
0068 7598D0		78	MOV SCON, #0D0H ;
006B 758840		79	MOV TCON, #40H ;
006E 75A890		80	MOV IE, #90H ;
0071 75B810		81	MOV IP, #10H ;
0074 7900		82	MOV R1, #00H ;
0076 7E00		83	MOV R6, #00H ;
0078 7D00		84	MOV R5, #00H ;
007A 7C00		85	MOV R4, #00H ;
007C C220		86	CLR BIT0 ;
007E 753846		87	MOV MESS9, #46H ;
0081 75324D		88	MOV MESS0, #4DH ;
0084 753349		89	MOV MESS1, #49H ;
0087 753443		90	MOV MESS2, #43H ;
008A 753552		91	MOV MESS3, #52H ;
008D 753654		92	MOV MESS4, #54H ;
0090 753752		93	MOV MESS5, #52H ;
0093 753841		94	MOV MESS6, #41H ;
0096 75394B		95	MOV MESS7, #4BH ;
0099 753A7F		96	MOV MESS8, #7FH ;
009C 1202AB		97	LCALL DSPLY ;
009F 1202E6		98	LCALL LATCH ;
00A2 1202E6		99	LCALL LATCH ;
00A5 753239		100	MOV MESS0, #39H ;
00A8 753334		101	MOV MESS1, #34H ;
00AB 753430		102	MOV MESS2, #30H ;
00AE 753530		103	MOV MESS3, #30H ;
00B1 75362A		104	MOV MESS4, #2AH ;
00B4 753757		105	MOV MESS5, #57H ;

LOC	OBJ	LINE	SOURCE
00B7	753847	106	MOV MESS6,#47H ;
00BA	753953	107	MOV MESS7,#53H ;
00BD	753A00	108	MOV MESS8,#00H ;
00C0	1202AB	109	LCALL DSPLY
00C3	0200C6	110	LJMP START1
		111	*****
		112	***
		113	***
		114	***
		115	*****
00C6	1200F6	116	START1: LCALL KSCAN ;
00C9	BE00FA	117	CJNE R6,#00H,START1 ;
00CC	1202AB	118	LCALL DSPLY ;
00CF	80F5	119	SJMP START1
		120	;
		121	;
		122	;
00D1	753252	123	INFORM: MOV MESS0,#52H ;
00D4	753345	124	MOV MESS1,#45H ;
00D7	75344D	125	MOV MESS2,#4DH ;
00DA	75352A	126	MOV MESS3,#2AH ;
00DD	753620	127	MOV MESS4,#20H ;
00E0	75374F	128	MOV MESS5,#4FH ;
00E3	753846	129	MOV MESS6,#46H ;
00E6	753946	130	MOV MESS7,#46H ;
00E9	1202AB	131	LCALL DSPLY
00EC	0200EF	132	LJMP DDH20
00EF	AB3B	133	DDH20: MOV R3,MESS9 ;
00F1	BB4E02	134	CJNE R3,#4EH,KSCAN ;
00F4	80F9	135	SJMP DDH20 ;
		136	*****
		137	***
		138	***
		139	***
		140	*****
00F6	30870E	141	KSCAN: JNB P0.7,KSCAN2 ;
00F9	30D513	142	KSCAN3: JNB F0,KSCAN1 ;
00FC	C2D5	143	CLR F0 ;
00FE	753F48	144	MOV KEYM,#48H ;
0101	753B46	145	MOV MESS9,#46H ;
0104	0201E6	146	LJMP SEND
0107	1201DF	147	KSCAN2: LCALL TIMER ;
010A	308759	148	JNB P0.7,MAINT ;
010D	80EA	149	SJMP KSCAN3
		150	;
		151	;
		152	;
010F	AB3B	153	KSCAN1: MOV R3,MESS9 ;
0111	BB4E03	154	CJNE R3,#4EH,KSCAN4 ;
0114	0200D1	155	LJMP INFORM ;
0117	E580	156	KSCAN4: MOV A,P0 ;
0119	B4FF01	157	CJNE A,#0FFH,CLOSE1 ;
011C	22	158	RET
011D	1201DF	159	CLOSE1: LCALL TIMER ;
0120	E580	160	MOV A,P0

MCS-51 MACRO ASSEMBLER REMV3

ICE

LOC	OBJ	LINE	SOURCE
0122	B4FF01	161	CJNE A,#0FFH,CLOSE2 ;
0125	22	162	RET
0126	B4FE06	163	CLOSE2: CJNE A,#0FEH,CLOSE3 ;
0129	753F41	164	MOV KEYM,#041H ;
012C	0201E6	165	LJMP SEND ;
012F	B4FD06	166	CLOSE3: CJNE A,#0FDH,CLOSE4 ;
0132	753F42	167	MOV KEYM,#42H ;
0135	0201E6	168	LJMP SEND ;
0138	B4FB06	169	CLOSE4: CJNE A,#0FBH,CLOSE5 ;
013B	753F43	170	MOV KEYM,#43H ;
013E	0201E6	171	LJMP SEND ;
0141	B4F706	172	CLOSE5: CJNE A,#0F7H,CLOSE6 ;
0144	753F44	173	MOV KEYM,#44H ;
0147	0201E6	174	LJMP SEND ;
014A	B4EF06	175	CLOSE6: CJNE A,#0EFH,CLOSE7 ;
014D	753F45	176	MOV KEYM,#45H ;
0150	0201E6	177	LJMP SEND ;
0153	B4DF06	178	CLOSE7: CJNE A,#0DFH,CLOSE8 ;
0156	753F46	179	MOV KEYM,#46H ;
0159	0201E6	180	LJMP SEND ;
015C	B4BF06	181	CLOSE8: CJNE A,#0BFH,CLOSE9 ;
015F	753F47	182	MOV KEYM,#47H ;
0162	0201E6	183	LJMP SEND ;
0165	22	184	CLOSE9: RET
		185	;
		186	;
		187	;
0166	20D508	188	MAINT: JB F0,MAINT1 ;
0169	D2D5	189	SETB F0 ;
016B	753F68	190	MOV KEYM,#68H ;
016E	0201E6	191	LJMP SEND ;
0171	E580	192	MAINT1: MOV A,P0 ;
0173	B47F01	193	CJNE A,#7FH,MAINT2 ;
0176	22	194	RET
0177	1201DF	195	MAINT2: LCALL TIMER ;
017A	E580	196	MOV A,P0 ;
017C	B47F01	197	CJNE A,#7FH,MAINT3 ;
017F	22	198	RET
0180	B47E06	199	MAINT3: CJNE A,#7EH,MAINT4 ;
0183	753F61	200	MOV KEYM,#61H ;
0186	0201E6	201	LJMP SEND ;
0189	B47D06	202	MAINT4: CJNE A,#7DH,MAINT5 ;
018C	753F62	203	MOV KEYM,#62H ;
018F	0201E6	204	LJMP SEND ;
0192	B47B09	205	MAINT5: CJNE A,#7BH,MAINT6 ;
0195	753F63	206	MOV KEYM,#63H ;
0198	1201C3	207	LCALL RMCHK ;
019B	0201E6	208	LJMP SEND ;
019E	B47706	209	MAINT6: CJNE A,#77H,MAINT7 ;
01A1	753F64	210	MOV KEYM,#64H ;
01A4	0201E6	211	LJMP SEND ;
01A7	B46F06	212	MAINT7: CJNE A,#6FH,MAINT8 ;
01AA	753F65	213	MOV KEYM,#65H ;
01AD	0201E6	214	LJMP SEND ;
01B0	B45F06	215	MAINT8: CJNE A,#5FH,MAINT9 ;

MCS-51 MACRO ASSEMBLER REMV3

PAG

LOC	OBJ	LINE	SOURCE
01B3	753F66	216	MOV KEYM,#66H ;
01B6	0201E6	217	LJMP SEND ;
01B9	B43F06	218	MAINT9: CJNE A,#3FH,MAINTA ;
01BC	753F67	219	MOV KEYM,#67H ;
01BF	0201E6	220	LJMP SEND ;
01C2	22	221	MAINTA: RET
		222	;
		223	;
		224	;
01C3	75322A	225	RMCHK: MOV MESS0,#2AH
01C6	753352	226	MOV MESS1,#52H ;
01C9	753445	227	MOV MESS2,#45H ;
01CC	75354D	228	MOV MESS3,#4DH ;
01CF	753643	229	MOV MESS4,#43H ;
01D2	753748	230	MOV MESS5,#48H ;
01D5	75384B	231	MOV MESS6,#4BH ;
01D8	75392A	232	MOV MESS7,#2AH ;
01DB	753A00	233	MOV MESS8,#00H
01DE	22	234	RET
		235	;
		236	;
		237	;
01DF	753C40	238	TIMER: MOV TIME,#DELAY ;
01E2	D53CFD	239	TIME1: DJNZ TIME,TIME1 ;
01E5	22	240	RET
		241	;
		242	;
		243	;
01E6	7B05	244	SEND: MOV R3,#05H
01E8	E53F	245	MOV A,KEYM
01EA	20D01A	246	JB P,PRTYX ;
01ED	C29B	247	CLR TB8 ;
01EF	BC00FD	248	SEND1: CJNE R4,#00H,SEND1 ;
01F2	853F99	249	MOV SBUF,KEYM ;
01F5	7C01	250	MOV R4,#01H ;
01F7	BE000A	251	CJNE R6,#00H,SEND2
01FA	E53F	252	MOV A,KEYM
01FC	B46302	253	CJNE A,#63H,SEND3 ;
01FF	7B0A	254	MOV R3,#0AH ;
0201	1202AB	255	SEND3: LCALL DSPLY
0204	DBE9	256	SEND2: DJNZ R3,SEND1
0206	22	257	RET
0207	D29B	258	PRTYX: SETB TB8 ;
0209	BC00FD	259	PRTYX1: CJNE R4,#00H,PRTYX1 ;
020C	853F99	260	MOV SBUF,KEYM ;
020F	7C01	261	MOV R4,#01H ;
0211	BE0003	262	CJNE R6,#00H,PRTYX2
0214	1202AB	263	LCALL DSPLY
0217	DBF0	264	PRTYX2: DJNZ R3,PRTYX1
0219	22	265	RET
		266	*****
		267	***
		268	***
		269	***
		270	*****

MCS-51 MACRO ASSEMBLER REMV3

PAGE

LOC	OBJ	LINE	SOURCE
021A	109807	271	INTRPT: JBC R1,RECEVE ;
021D	109901	272	JBC TI,WRONG ;
0220	32	273	RETI
0221	7C00	274	WRONG: MOV R4,#00H ;
0223	32	275	RETI ;
0224	E599	276	RECEVE: MOV A,SBUF ;
0226	20D005	277	JB P,PRTY1 ;
0229	209A60	278	JB R88,WRONGP
022C	8006	279	SJMP PRTY2
022E	209A03	280	PRTY1: JB R88,PRTY2 ;
0231	02028C	281	LJMP WRONGP
0234	B46205	282	PRTY2: CJNE A,#062H,RCEVE1 ;
0237	7E01	283	MOV R6,#01H ;
0239	C220	284	CLR BIT0 ;
023B	32	285	RETI
023C	BE0104	286	RCEVE1: CJNE R6,#01H,RCEVE2 ;
023F	F532	287	MOV MESS0,A ;
0241	0E	288	INC R6 ;
0242	32	289	RETI
0243	BE0204	290	RCEVE2: CJNE R6,#02H,RCEVE3 ;
0246	F533	291	MOV MESS1,A ;
0248	0E	292	INC R6 ;
0249	32	293	RETI
024A	BE0304	294	RCEVE3: CJNE R6,#03H,RCEVE4 ;
024D	F534	295	MOV MESS2,A ;
024F	0E	296	INC R6 ;
0250	32	297	RETI
0251	BE0404	298	RCEVE4: CJNE R6,#04H,RCEVE5 ;
0254	F535	299	MOV MESS3,A ;
0256	0E	300	INC R6 ;
0257	32	301	RETI
0258	BE0504	302	RCEVE5: CJNE R6,#05H,RCEVE6 ;
025B	F536	303	MOV MESS4,A ;
025D	0E	304	INC R6 ;
025E	32	305	RETI
025F	BE0604	306	RCEVE6: CJNE R6,#06H,RCEVE7 ;
0262	F537	307	MOV MESS5,A ;
0264	0E	308	INC R6 ;
0265	32	309	RETI
0266	BE0704	310	RCEVE7: CJNE R6,#07H,RCEVE8 ;
0269	F538	311	MOV MESS6,A ;
026B	0E	312	INC R6 ;
026C	32	313	RETI
026D	BE0804	314	RCEVE8: CJNE R6,#08H,RCEVE9 ;
0270	F539	315	MOV MESS7,A ;
0272	0E	316	INC R6 ;
0273	32	317	RETI
0274	BE0904	318	RCEVE9: CJNE R6,#09H,RCEVEA ;
0277	F53A	319	MOV MESS8,A ;
0279	0E	320	INC R6 ;
027A	32	321	RETI
027B	BE0A04	322	RCEVEA: CJNE R6,#0AH,RCEVEB ;
027E	F53B	323	MOV MESS9,A ;
0280	0E	324	INC R6 ;
0281	32	325	RETI

LOC	OBJ	LINE	SOURCE
0282	BE0806	326	RCEVB: CJNE R6,#0BH,WRONGR ;
0285	B46503	327	CJNE A,#065H,WRONGR ;
0288	7E00	328	MOV R6,#00H ;
028A	32	329	RETI ;
028B	32	330	WRONGR: RETI ;
028C	D220	331	WRONGP: SETB BIT0 ;
028E	32	332	RETI ;
		333	;
		334	;
		335	;
028F	C220	336	PRTYD: CLR BIT0 ;
0291	75322A	337	MOV MESS0,#2AH ;
0294	753350	338	MOV MESS1,#50H ;
0297	753441	339	MOV MESS2,#41H ;
029A	753552	340	MOV MESS3,#52H ;
029D	753649	341	MOV MESS4,#49H ;
02A0	753754	342	MOV MESS5,#54H ;
02A3	753859	343	MOV MESS6,#59H ;
02A6	75392A	344	MOV MESS7,#2AH ;
02A9	8000	345	SJMP DSPLY ;
		346	*****
		347	***
		348	***
		349	***
		350	*****
02AB	2020E1	351	DSPLY: JB BIT0,PRTYD ;
02AE	7932	352	MOV R1,#032H ;
02B0	7D17	353	MOV R5,#17H ;
02B2	D2B7	354	SETB P3.7 ;
02B4	8740	355	DSPLY1: MOV DSPLYM,@R1 ;
02B6	8DA0	356	MOV P2,R5 ;
02B9	854090	357	MOV P1,DSPLYM ;
02BB	C2B7	358	CLR P3.7 ;
02BD	00	359	NOP ;
02BE	D2B7	360	SETB P3.7 ;
02C0	1D	361	DEC R5 ;
02C1	09	362	INC R1 ;
02C2	B936EF	363	CJNE R1,#36H,DSPLY1 ;
02C5	7D1B	364	MOV R5,#1BH ;
02C7	8740	365	DSPLY2: MOV DSPLYM,@R1 ;
02C9	8DA0	366	MOV P2,R5 ;
02CB	854090	367	MOV P1,DSPLYM ;
02CE	C2B7	368	CLR P3.7 ;
02D0	00	369	NOP ;
02D1	D2B7	370	SETB P3.7 ;
02D3	1D	371	DEC R5 ;
02D4	09	372	INC R1 ;
02D5	B93AEF	373	CJNE R1,#3AH,DSPLY2 ;
02D8	75A00D	374	MOV P2,#0DH ;
02DB	8740	375	MOV DSPLYM,@R1 ;
02DD	854090	376	MOV P1,DSPLYM ;
02E0	C2B7	377	CLR P3.7 ;
02E2	00	378	NOP ;
02E3	D2B7	379	SETB P3.7 ;
02E5	22	380	RET ;

MCS-51 MACRO ASSEMBLER REMV3

PAGE

LOC	OBJ	LINE	SOURCE
		381	;
		382	;
		383	;
02E6	753DFF	384	LATCH: MOV LCHMSD, #PAUSE1 ;
02E9	753EFF	385	MOV LCHMSD, #PAUSE2 ;
02EC	E53E	386	LATCH1: MOV A, LCHMSD
02EE	6009	387	JZ LATCH2
02F0	D53EF9	388	DJNZ LCHMSD, LATCH1 ;
02F3	E53D	389	MOV A, LCHMSD ;
02F5	B40001	390	CJNE A, #00H, LATCH2 ;
02F8	22	391	RET ;
02F9	753EFF	392	LATCH2: MOV LCHMSD, #OFFH
02FC	153D	393	DEC LCHMSD
02FE	80EC	394	SJMP LATCH1
		395	;
OFFD		396	ORG OFFDH
		397	;
OFFD	020000	398	LJMP START ;
		399	END



European Patent
Office

EUROPEAN SEARCH REPORT

Application number

EP 89303909.9

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (Int. Cl.) 5
X	DE - A1 - 3 535 011 (ERHARDT & LEIMER GMBH) * Totality * --	1, 16, 17	B 65 H 23/038 B 65 H 23/26
X	US - A - 3 724 732 (BONNER) * Totality * -----	1, 16, 17	
			TECHNICAL FIELDS SEARCHED (Int. Cl.) 5
			B 65 H 23/00
The present search report has been drawn up for all claims			
Place of search VIENNA		Date of completion of the search 08-02-1990	Examiner PFAHLER
CATEGORY OF CITED DOCUMENTS			
X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document		T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application L : document cited for other reasons A : member of the same patent family, corresponding document	